Martin® Return Roller Basket Standard Version Installation Instructions





▲ DANGER

Before installing, servicing, or adjusting the conveyor equipment, turn off and lockout / tagout / blockout / testout all energy sources to the conveyor and conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.

▲WARNING

Martin[®] Return Roller Baskets are designed to prevent return roller from falling in case of mechanical failure. Martin[®] Return Roller Baskets do not guard personnel from contacting return roller.

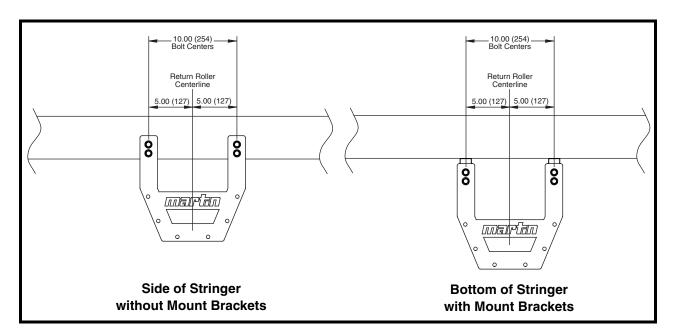


Figure 1. Martin[®] Return Roller Basket Mounting Location

- 1. Turn off and lockout / tagout / blockout / testout energy source according to ANSI standards.
- 2. Mark vertical center line of return roller. Make sure center line is perpendicular to belt line.
- 3. Measure 5.00 in. (127 mm) in both directions and mark locations.

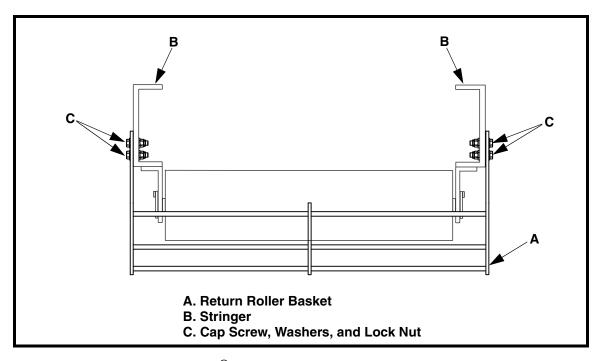


Figure 2. Martin® Return Roller Basket without Brackets

Installation without brackets

- 1. Align return roller basket (A) with previously marked locations, see Figure 1.
- 2. Using the basket as a template, mark location of mounting holes.
- 3. Drill or cut holes in stringer (B). Remove burrs and sharp edges.
- 4. Install return roller basket to stringer using cap screws, washers, and nuts (C).
- 5. Make sure all fasteners are tight and return roller baskets do not interfere with operation of conveyor.

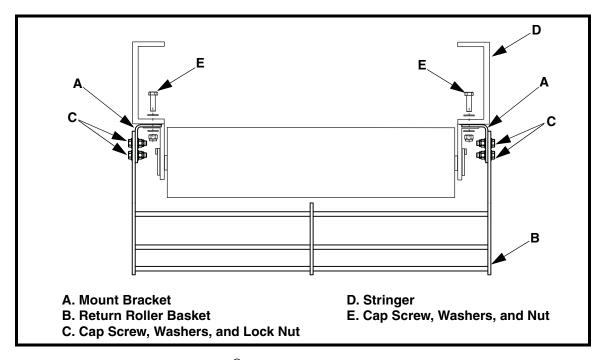


Figure 3. Martin[®] Return Roller Basket with Brackets

Installation with brackets

- 1. Install mounting brackets (A) on return roller basket (B) using cap screws, washers and lock nuts (C).
- 2. Align mount brackets with previously marked locations, see Figure 1.
- 3. Using the brackets as a template, mark location of mounting holes.
- 4. Drill or cut holes in stringer (D). Remove burrs and sharp edges.
- 5. Install return roller basket with brackets to stringer using cap screws, washers, and nuts (E).
- 6. Make sure all fasteners are tight and return roller baskets do not interfere with operation of conveyor.

Part Numbers

NOMENCLATURE	RRBL XX X X X
P/N Prefix ———	
Belt Width (inches) ————————————————————————————————————	
Color/Material ————	
Bracket Kit ————	

STRINGER

S: Standard Base **W:** Wide Base

COLOR/MATERIAL

O: Martin® Orange C: 304 Stainless Steel S: 316 Stainless Steel

BRACKET KIT

O: Without Kit **K:** With Kit

COMPANY WITH QUALITY SYSTEM CERTIFIED BY DNV = ISO 9001:2008 =

Form No. M4054-06/16

© 2016 MARTIN ENGINEERING COMPANY. All rights reserved.

Patents and patents pending, $\ensuremath{\$}$ Registered trademark of

Martin Engineering Company in the U.S. and other select locations.



Neponset, IL 61345-9766 USA Phone: 309-852-2384 or 800-544-2947 FAX: 800-814-1553 www.martin-eng.com