Martin® QC1™ Metal Tipped Pre-Cleaner Blade Installation Instructions





A DANGER

Before installing, servicing, or adjusting the belt cleaner/tensioner, turn off and lock out/tag out all energy sources to the conveyor and conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.

ACAUTION

Martin[®] QC1TM Metal Tipped Pre-Cleaner Blades should NOT be used on belts with mechanical fasteners. They are intended to be used only on Vulcanized Belts. When used on belts with mechanical fasteners, damage may occur to both the belt and the cleaner assembly. The cleaner should NOT be used on a belt that contains gouges, holes, or other belt imperfections, as the cleaner may cause further damage to the belt.

- 1. Remove worn blade from belt cleaner mainframe.
- 2. Verify mounting dimensions are correct according to *Martin*[®] *QC1*TM *Pre-Cleaner with Metal Tipped Blade Operator's Manual*, P/N M3814.
- 3. Install Martin® QC1TM Metal Tipped Blade.
- 4. Place Metal Tipped Blade Caution Labels (P/N 38679) on belt cleaner mainframe and on outside of chute wall visible to belt cleaner operator.
- 5. Re-tension belt cleaner according to tensioner operator's manual. See Figure 1 or 2 for tensioner labels.



Failure to remove tools from installation area and conveyor belt before turning on energy source can cause serious injury to personnel and damage to belt.

A DANGER

Do not touch or go near conveyor belt or conveyor accessories when conveyor belt is running. Body or clothing can get caught and pull body into conveyor belt, causing severe injury or death.

- 6. Turn on conveyor belt for 1 hour, then turn off.
- 7. Make sure all fasteners are tight. Tighten if necessary.





Martin [®] Twist Tensioner Recommended Tension						
	Number of notches					
Belt width in. (mm)	Martin® QC1™ Cleaner HD	Durt Hawg® DH2 Cleaner	Martin® PV Cleaner	Martin® QC1™ Cleaner Metal Tipped		
18 (400-500)	2	2	3	1		
24 (500-650)	3	3	4	1		
30 (650-800)	3	3	4	1		
36 (800-1000)	4	4	4	1		
42 (1000-1200)	5	5	5	1		
48 (1200-1400)	6	6	5	1		
54 (1400-1600)	3*	3*	4*	1*		
60 (1600-1800)	4*	4*	4*	1*		
72 (1800-2000)	5*	5*	5*	1*		
84 (2000-2200)	5*	5*	5*	1*		
96 (2200-2400)	6*	6*	6*	1*		
* Per tensione	r; dual tensio	ners required				
Patents issued and pending Label P/N 33383						
800-544-2947 or 309-852-2384 www.martin-eng.com						

Figure 1. Martin[®] Twist Tensioner Label, P/N 33383

Belt width	Martin [®] QC1™ Cleaner HD	Durt Hawg® DH2 Cleaner	Martin® QC1™ Metal Tipped		
in. (mm)	Spring length †	Spring length †	Spring length †		
18 (400-500)	3.63 (92)	3.38 (86)	3.85 (98)		
24 (500-650)	3.50 (90)	3.25 (83)	3.85 (98)		
30 (650-800)	3.38 (86)	3.00 (76)	3.85 (98)		
36 (800-1000)	3.25 (83)	3.00 (76)	3.85 (98)		
42 (1000-1200)	3.13 (79)	2.88 (73)	3.85 (98)		
48 (1200-1400)	3.00 (76)	2.75 (70)	3.85 (98)		
54 (1400-1600)	3.38 (86)*	3.38 (86)*	3.85 (98)*		
60 (1600-1800)	3.38 (86)*	3.25 (83)*	3.85 (98)*		
72 (1800-2000)	3.25 (83)*	3.00 (76)*	3.85 (98)*		
84 (2000-2200)	3.13 (79)*	3.00 (76)*	3.85 (98)*		
96 (2200-2400)	3.00 (76)*	2.75 (70)*	3.85 (98)*		
*Per tensioner. Dual tensioners required. † Compress					
800-544-2947 Place label on chute wa visible to tensioner use visible to tensioner use www.martin-eng.com					

Figure 2. Martin[®] Spring Tensioner Label, P/N 32259

COMPANY WITH QUALITY SYSTEM CERTIFIED BY DNV = ISO 9001:2008 =

martn_®

Form No. M3816-08/12 $\,$ © 2010, 2012 MARTIN ENGINEERING COMPANY. All rights reserved.

Neponset, IL 61345-9766 USA Phone: 309-852-2384 or 800-544-2947 FAX: 800-814-1553 www.martin-eng.com