



Martin® QC1+™ Cleaner HD



Operating Instructions Part 2

Version: 0
Language: ENG
M4124E UK 2025-01 QC1+HD

1 General

1	General	2
1.1	Part number	3
1.2	Technical Data	3
1.3	Locally valid product variants	3
2	Installation	4
2.1	Determining the installation position	4
2.2	Preparing the cleaner	4
2.3	Installing the tensioner	5
2.4	Installing the cleaner	5
2.5	Tension values of twist tensioner 38850-...	6
2.6	Tension values of spring tensioner 38180-...	6
2.7	Tension values of air tensioner 32745-...	6
2.8	Placing labels	7
3	Scope of delivery and spare parts	8
3.1	Pre-cleaner	8
3.2	Blades	9



NOTE


Before starting work on the cleaner or the conveyor, part 1 and 2 of these operating instructions must be read and understood completely

These operating instructions apply solely for cleaners and are intended for those persons who install cleaners, commission them, and monitor their usage.

The operating instructions must be kept for the lifetime of the cleaners and must be made available in an orderly condition to all persons entrusted with work with and on the cleaners.

Part 1 of the operating instructions, which is provided separately, is an integral part of these operating instructions.

1.1 Part number

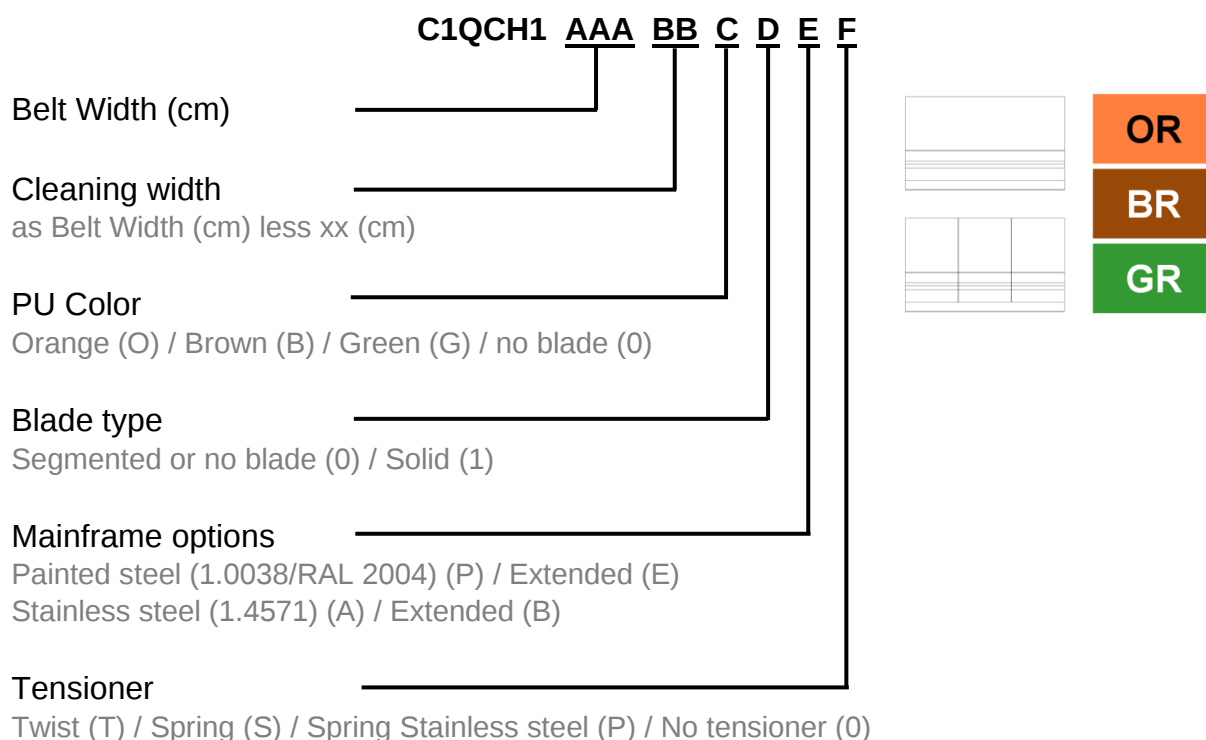

1.2 Technical Data

The cleaner is suitable for the following operating parameters:

	Operating parameter
Belt widths:	500 – 2.400 mm
Pulley diameter:	300 - 600 mm
Belt speed:	Max. 4,6 m/s
Temperature range:	-40 - 150 °C depending on PU type
Reversing operation:	Possible but has no cleaning effect

1.3 Locally valid product variants

Herein shown are generally valid product variants. The products may show minor design deviations depending on the location of delivery.

When identifying part numbers for individual components and spare parts, always use the locally valid product information and drawings.

If in doubt, please contact your local Martin Engineering representative.


2 Installation



NOTE


For a general description of cleaner installation, refer to part 1 of these operating instructions.

2.1 Determining the installation position

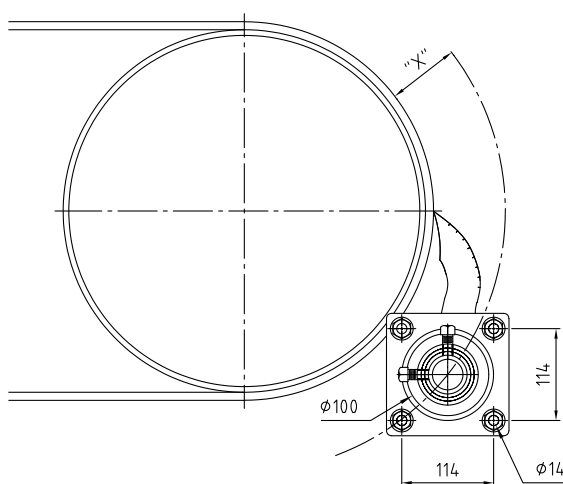


Pulley diameter* in mm	X in mm
300-375	114
376-475	102
476-600	89
*(Including pulley lining and conveyor belt)	


2.2 Preparing the cleaner

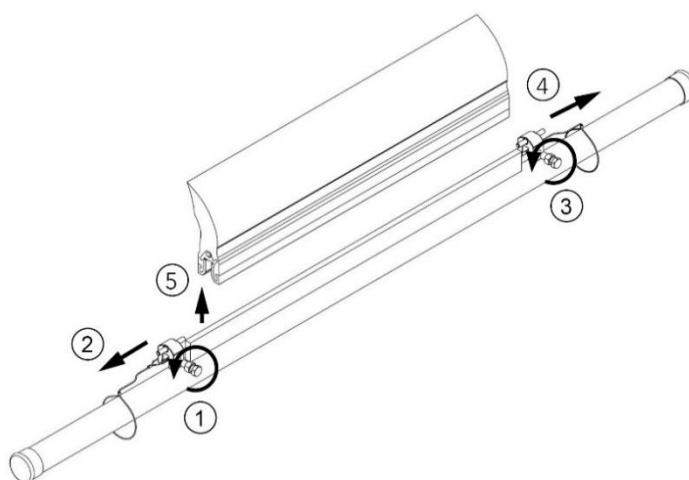

2.3 Installing the tensioner

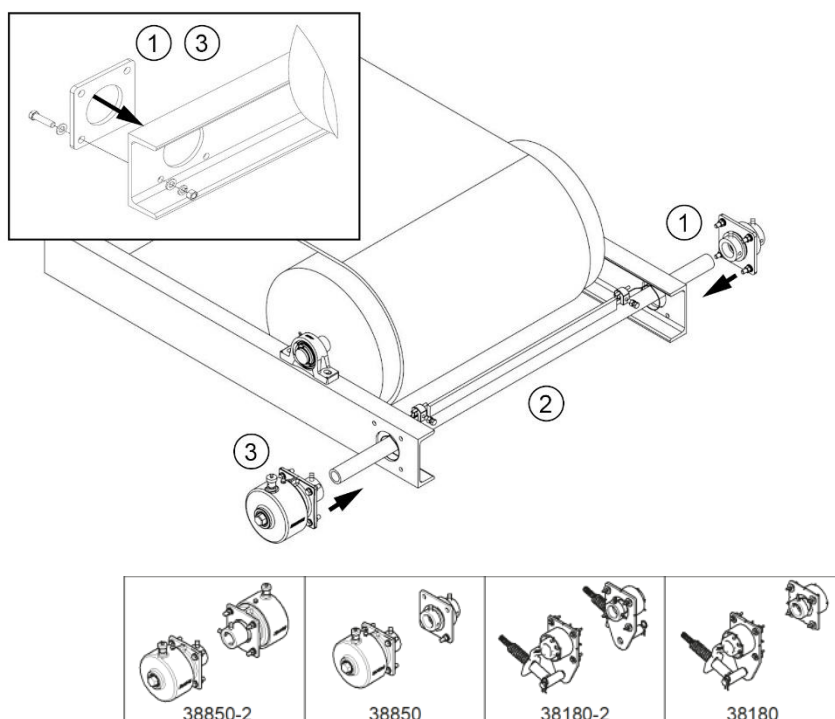

2.4 Installing the cleaner

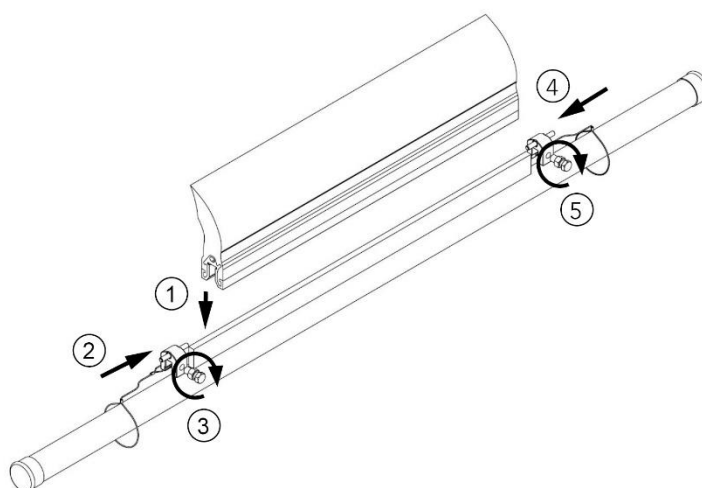


Note: The width of the blade should be adjusted to the width of the material on the belt. The QC1+ blades can be shortened to any width by cutting them off.

2.5 Tension values of twist tensioner 38850-...

Belt width mm	Number of notches (clicks)
500	2
650	3
800	3
1.000	4
1.200	5
1.400	6
1.600	3*
1.800	4*
2.000	5*
2.200	5*
2.400	6*


*Per tensioner; Dual tensioners are needed

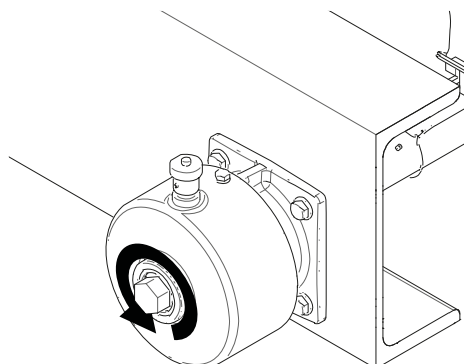

2.6 Tension values of spring tensioner 38180-...

Belt width mm	Compression spring length in mm
500	92
650	90
800	86
1.000	83
1.200	79
1.400	76
1.600	86*
1.800	86*
2.000	83*
2.200	79*
2.400	76*


*Per tensioner; Dual tensioners are needed

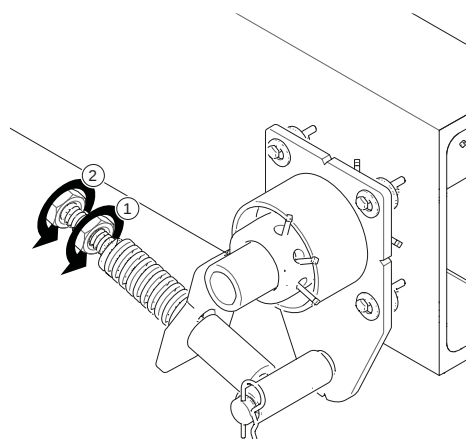

2.7 Tension values of air tensioner 32745-...

Belt width mm	Compressed air pressure in bar
500	0,4
650	0,6
800	0,8
1.000	1,0
1.200	1,2
1.400	1,4
1.600	0,8*
1.800	0,9*
2.000	1,1*
2.200	1,2*
2.400	1,4*

*Per tensioner; Dual tensioners are needed

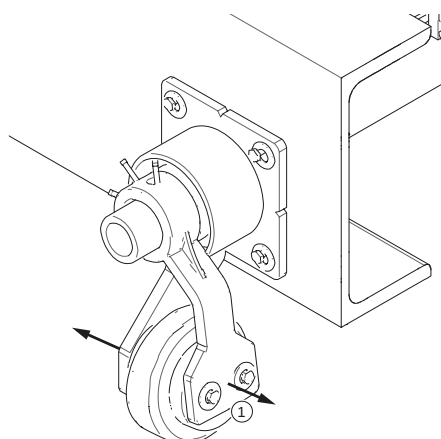

2.8 Placing labels

2.8.1 Safety label

The safety label below must be attached to the conveyor system in the immediate vicinity of the cleaner:



2.8.2 Other labels

The labels below are attached to the product:

1. Sticker showing the address of the Martin Engineering branch and the designation of the product
2. A sticker containing the tension values for the respective tensioner

3.2 Blades



France

Martin Engineering SARL
50, Avenue d'Alsace, 68025 Colmar Cedex,
France
Tel +33 3 89 20 63 24; Fax +33 3 89 20 43 79
info@martin-eng.fr; www.martin-eng.fr

United Kingdom

Martin Engineering Ltd.
Unit 33, The Tangent Business Hub, Weighbridge
Road,
Shirebrook, NG20 8RX, United Kingdom
Tel +44 115 946 4746
info@martin-eng.co.uk; www.martin-eng.co.uk

Italy

Martin Engineering
Via Monza 99/18, 20060 Gessate (MI),
Italy
Tel +39 02 9538 38 51
info@martin-eng.it; www.martin-eng.it

Germany

Martin Engineering GmbH
In der Rehbach 14, 65396 Walluf, Germany
Tel. +49 6123 9782-0; Fax +49 6123 7553-3
info@martin-eng.de; www.martin-eng.de

Spain

Martin Engineering Spain
c/Balmes 297 3° 1ª b 08006 Barcelona, Spain
Tel. +34 876 245 114
info@martin-eng.es; www.martin-eng.es

Turkey

Martin Engineering Türkiye
Yukarı Dudullu İmes Sanayi Sitesi, B Blok 205 Sokak
No.6
34775 Ümraniye İstanbul, Turkey
Tel +90 216 499 34 91
info@martin-eng.com.tr; www.martin-eng.com.tr