

 
Martin[®] SMART[™] Series Retractable Nozzle 360°



The Martin® SMART™ Series Retractable Nozzle 360° is used for hard to reach locations in cement towers and other high-temp applications. The 360 degree nozzle makes cleaning on the center of the wall possible. Servicable from the outside of the tower/vessel, so no waiting until the next scheduled outage for nozzle assembly replacement.

ORDER INFORMATION


Retractable Nozzle Assembly	P/N 38984
Replacement Nozzle	P/N 38983-NW




Replacement Nozzle

BENEFITS

- 360 degree effective cleaning area.
- Nozzle extends to fire then retracts to protect exposed tip from extreme heat.
- Works with standard air cannons (150L Martin® Hurricane is recommended).
- 360 degree nozzle weldment is serviceable for the outside of the riser duct.
- Controlled by one solenoid (110 volt/ 220 volt/ 24 volt).
- Used in place of CO2 blasting.
- 360 degree nozzle is less aggressive than CO2 blasting, so it will not damage refractory.

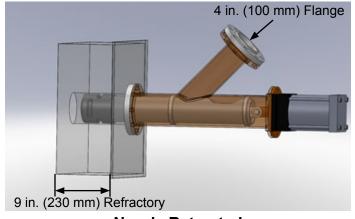



Nozzle Retracted

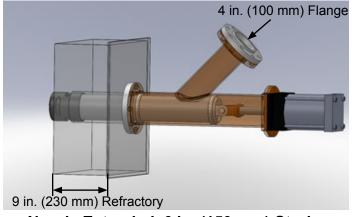

Nozzle Extended-6 in. (150 mm) Stroke

TECHNICAL DATA SHEET

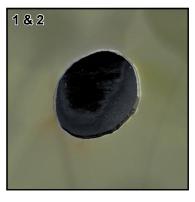

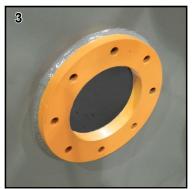





NOZZLE ASSEMBLY INSTALLATION

- 1. Cut 6 in. (150 mm) hole in vessel wall.
- 2. Core drill 6 in. (150 mm) hole through refractory.
- 3. Weld supplied flange to vessel wall.

- 4. Install retractable nozzle assembly onto flange using cap screws and compression washers.
- 5. Plumb air cylinder according to drawing S50098.

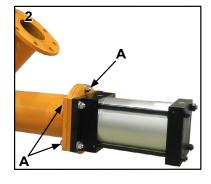

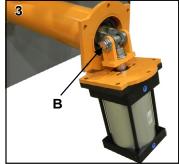



NOZZLE REPLACEMENT

- Turn off and lock out/tag out energy source per local requirements.
- 2. Remove cap screws, washers, and nuts (A).
- 3. Lower air cylinder and remove pin (B).

- 4. Remove and replace nozzle.
- 5. Install pin (B) and air cylinder.
- 6. Install cap screws, washers, and nuts (A).



Martin Engineering USA
One Martin Place
Neponset, IL 61345-9766 USA
800 544 2947 or 309 852 2384
Fax 800 814 1553
www.martin-eng.com

COMPANY WITH QUALITY SYSTEM CERTIFIED BY DNV = ISO 9001:2008 =