

**martin**<sup>®</sup>

# **Martin<sup>®</sup>** **SQC2S™ Cleaner**

[Go to Martin<sup>®</sup> SQC2S™ Cleaner web page](#)



***Operator's Manual***  
***M3820***

# **Important**

MARTIN ENGINEERING HEREBY DISCLAIMS ANY LIABILITY FOR: DAMAGE DUE TO CONTAMINATION OF THE MATERIAL; USER'S FAILURE TO INSPECT, MAINTAIN AND TAKE REASONABLE CARE OF THE EQUIPMENT; INJURIES OR DAMAGE RESULTING FROM USE OR APPLICATION OF THIS PRODUCT CONTRARY TO INSTRUCTIONS AND SPECIFICATIONS CONTAINED HEREIN. MARTIN ENGINEERING'S LIABILITY SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF EQUIPMENT SHOWN TO BE DEFECTIVE.

Observe all safety rules given herein along with owner and Government standards and regulations. Know and understand lockout/tagout procedures as defined by American National Standards Institute (ANSI) ANSI/ASSP z244.1-2016 (R2020), *The Control of Hazardous Energy Lockout, Tagout And Alternative Methods and Occupational Safety* and Health Administration (OSHA) Federal Register, Part IV, 29 CFR Part 1910, *Control of Hazardous Energy Source (Lockout/Tagout)*; Final Rule.

The following symbols may be used in this manual:

## **DANGER**

**Danger:** Immediate hazards that will result in severe personal injury or death.

## **WARNING**

**Warning:** Hazards or unsafe practices that could result in personal injury.

## **CAUTION**

**Caution:** Hazards or unsafe practices that could result in product or property damages.

## **IMPORTANT**

**Important:** Instructions that must be followed to ensure proper installation/operation of equipment.

## **NOTE**

**Note:** General statements to assist the reader.

# Table of Contents

---

Section	Page
List of Figures and Tables .....	ii
Introduction .....	1
General .....	1
Installations without chutework .....	1
Belt cleaner inspection access .....	1
References .....	1
Safety .....	2
Urethane shelf life .....	3
Before Installing Belt Cleaner .....	4
Installing Belt Cleaner Aseembly .....	5
Marking chute cutouts .....	6
Removing blade .....	7
Installing tensioner .....	7
Installing blade .....	7
After Installing Belt Cleaner .....	8
Weekly Maintenance .....	9
Troubleshooting .....	10
Part Numbers .....	11

## List of Figures

---

<b>Figure</b>	<b>Title</b>	<b>Page</b>
1	Mounting Locations .....	5
2	Tangent Point .....	6
3	Removing and Installing Blade Cartidge .....	7
4	Martin® SQC2S™ Cleaner Assembly, P/N SQC2S-XXXXXXXXXXXX .....	13
5	Martin® SQC2S™ Cleaner Assembly with 3-in. Martin® SAF2™ Style Blades, P/N SQC2S-XXXXXX3XXX .....	17
6	Martin® SQC2S™ Cleaner Assembly with Chevron Blades, P/N SQC2S-XXCXXX7XXX .....	20
7	Conveyor Products Warning Label, P/N 23395 .....	22
8	Martin® SQC2S™ Tensioning Label, P/N SQC2-10002 .....	22

## List of Tables

---

<b>Table</b>	<b>Title</b>	<b>Page</b>
I	Urethane Shelf Life .....	3
II	Martin® SQC2S™ Cleaner Mainframe Part Numbers and Quantities A & B .....	14/15
III	Martin® SQC2S™ Cleaner Blade Assembly Part Numbers and Quantities .....	16
IV	Martin® SQC2S™ Cleaner Assembly Blade Chart .....	16
V	Martin® SQC2S™ SAF2 Cleaner Assembly Part Numbers and Quantities .....	17
VI	Martin® SQC2S™ Cleaner Optional Door Part Numbers .....	17
VII	Martin® SQC2S™ Cleaner SAF2 Assembly Blade Chart .....	19
VIII	Martin® SQC2S™ SAF2 Cleaner Optional Door Part Numbers .....	19
IX	Martin® SQC2S™ Cleaner Assembly with Chevron Blades Part Numbers and Quantities .....	21
X	Martin® SQC2S™ Cleaner Assembly Chevron Blade Chart .....	21
XI	Martin® SQC2S™ Chevron Cleaner Optional Door Part Numbers .....	21

# Introduction

---

## **General**

To introduce product back into the product flow, a Pre-Cleaner is installed on the face of the head pulley. On a dual cleaner system, the Secondary Cleaner is installed immediately following the Pre-Cleaner to remove stubborn material left on the conveyor belt. If a Pre-Cleaner cannot be used because of space limitations, the Secondary Cleaner is installed alone. If the material handling process or product could be affected by contamination from the use of these belt cleaners, the user is responsible for taking the necessary steps to prevent contamination. Consult Martin Engineering or a representative for alternate belt cleaners or belt cleaner locations to use where contamination may be an issue.

## **Installations without chutework**

These procedures were written for equipment that is being installed on enclosed pulley chutework. If the pulley is not enclosed, the equipment should be installed using the best available field resources and methods to ensure that the critical dimensions are followed for proper installation.

## **Belt cleaner inspection access**

If the belt cleaner is installed on enclosed pulley chutework, a Martin® Inspection Door should be installed. Martin® Inspection Doors are available from Martin Engineering or a representative.

## **References**

The following documents are referenced in this manual:

- American National Standards Institute ANSI/ASSP z244.1-2016 (R2020), *The Control Of Hazardous Energy Lockout, Tagout And Alternative Methods*, American National Standards Institute, Inc., 1430 Broadway, New York, NY 10018.
- Federal Register, Volume 54, Number 169, Part IV, 29 CFR Part 1910, *Control of Hazardous Energy Source (Lockout/Tagout); Final Rule*, Department of Labor, Occupational Safety and Health Administration (OSHA), 32nd Floor, Room 3244, 230 South Dearborn Street, Chicago, IL 60604.
- *Martin® SQC2S™ Square Mainframe Tensioners Operator's Manual*, P/N M3815

# Introduction

## Safety

All safety rules defined in the above documents and all owner/employer safety rules must be strictly followed when working on the belt cleaner.



### **DANGER**

**Do not touch or go near the conveyor belt or conveyor accessories when the belt is running. Your body or clothing can get caught and you can be pulled into the conveyor, resulting in severe injury or death.**



### **DANGER**

**Before installing, servicing, or adjusting the belt cleaner, turn off and lock out/tag out all energy sources to the conveyor and conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.**




### **DANGER**

**If this equipment will be installed in an enclosed area, test the gas level or dust content before using a cutting torch or welding. Using a torch or welding in an area with gas or dust may cause an explosion resulting in serious injury or death.**



### **WARNING**

**Before using a cutting torch or welding the chute wall, cover the conveyor belt with a fire retardant cover. Failure to do so can allow the belt to catch fire.**

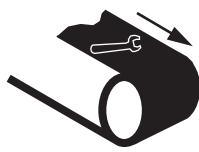

### **WARNING**

**Remove all tools from the installation area and conveyor belt before turning on the conveyor. Failure to do so can cause serious injury to personnel or damage to the belt and conveyor.**




### **WARNING**

**Mainframe with blade can be heavy and may require two people to lift. Attempting to lift the belt cleaner without assistance could result in injury.**

**Urethane shelf life****IMPORTANT**

Urethane put in service after exceeding it's shelf life may wear differently and deteriorate quicker than normal urethane.

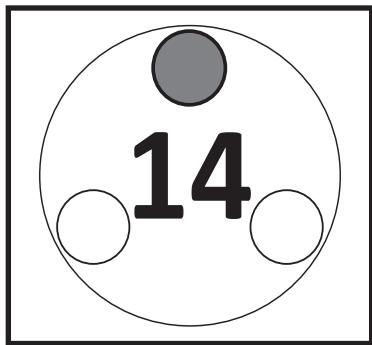**NOTE**

Code Date is written near bottom of blade as mm/dd/yy-x. In addition to or in place of this date, you may see an imprinted date medallion similar to the example shown. In this example, "22" stands for the year 2022. The small circles represent the quarter of the year. If three circles are "punched" the blade was produced in the first quarter. If none of the circles are "punched" the blade was produced in the fourth quarter. If code date on your blade(s) is not legible or is missing, contact Martin Engineering or a representative.

**Table I. Urethane Shelf Life**

Blade Color	Shelf Life
Blue	1 Year from Code Date
Brown	2 Years from Code Date
Clear	1 Year from Code Date
Green	2 Years from Code Date
Orange	1 Year from Code Date

# Before Installing Belt Cleaner

---

## IMPORTANT

The delivery service is responsible for damage occurring in transit. Martin Engineering CANNOT enter claims for damages. Contact your transportation agent for more information.

1. Inspect shipping container for damage. Report damage to delivery service immediately and fill out delivery service's claim form. Keep any damaged goods subject to examination.
2. Remove belt cleaner assembly from shipping container.
3. If anything is missing contact Martin Engineering or a representative.



## WARNING

Before installing equipment, turn off and lock out/ tag out all energy sources to the conveyor and conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.

4. Turn off and lock out/tag out energy source according to ANSI standards (see "References").



## DANGER

If this equipment will be installed in an enclosed area, test the gas level or dust content before using a cutting torch or welding. Using a torch or welding in an area with gas or dust may cause an explosion resulting in serious injury or death.


5. If using a cutting torch or welding, test atmosphere for gas level or dust content. Cover conveyor belt with fire retardant cover.

## IMPORTANT


Center the belt cleaner blades to clean an area narrower than the conveyor belt width. This allows for side-to-side movement of the belt and prevents damage to the belt edge.

# Installing Belt Cleaner Assembly

## Martin® SQC2S™ Blade, Martin® SAF2™ Reversing Blade, and Martin® Chevron Blade Mounting Location

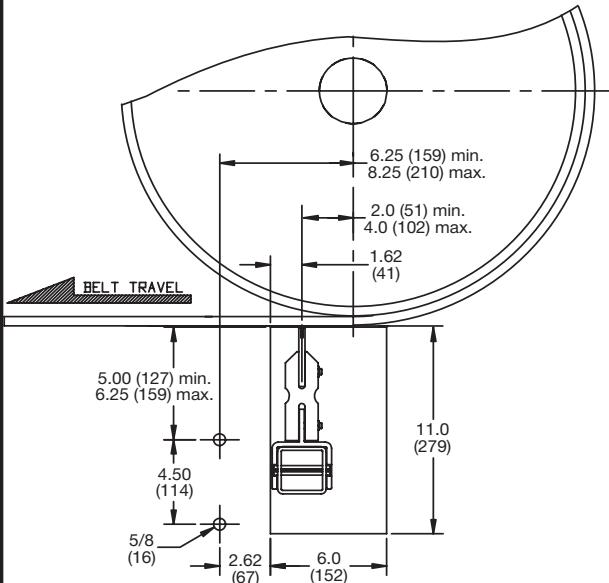


**Left Side Mounting**

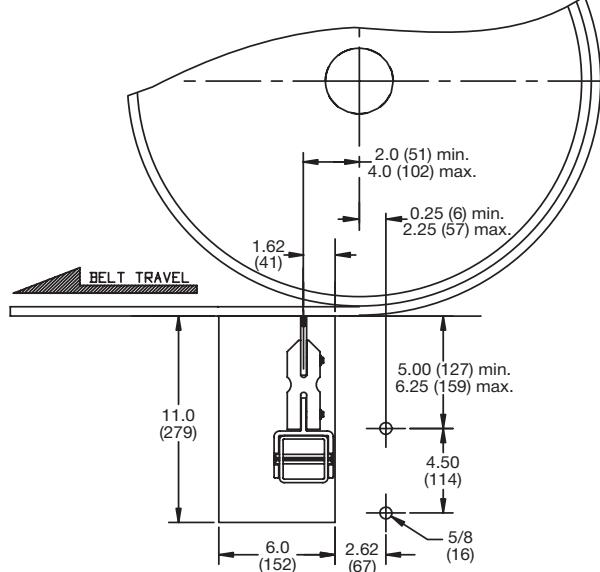


**Right Side Mounting**

## Martin® SAF2™ Blade Mounting Location

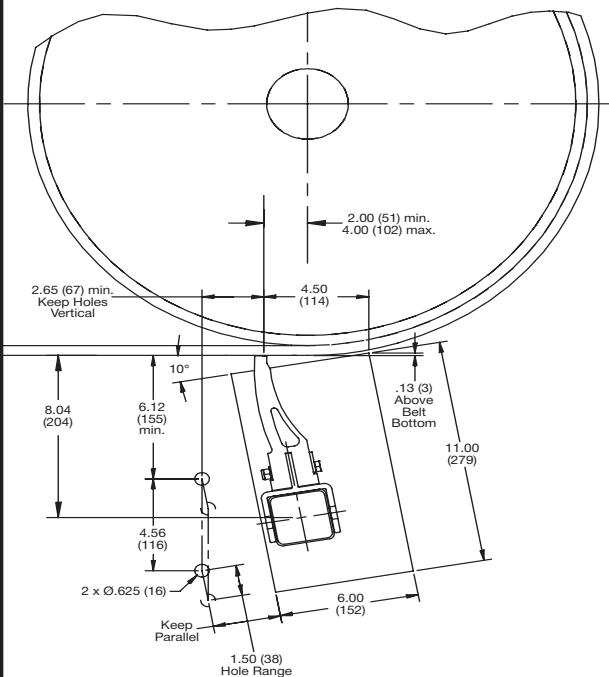


**Left Side Mounting**

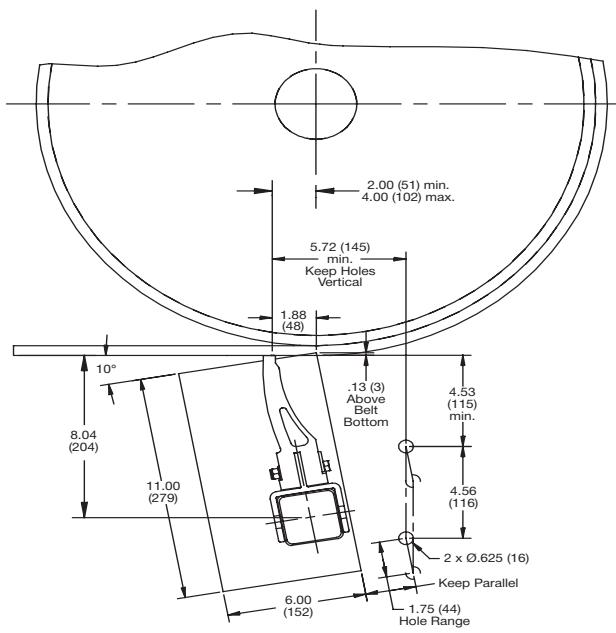

**Right Side Mounting**

**Figure 1. Mounting Locations**

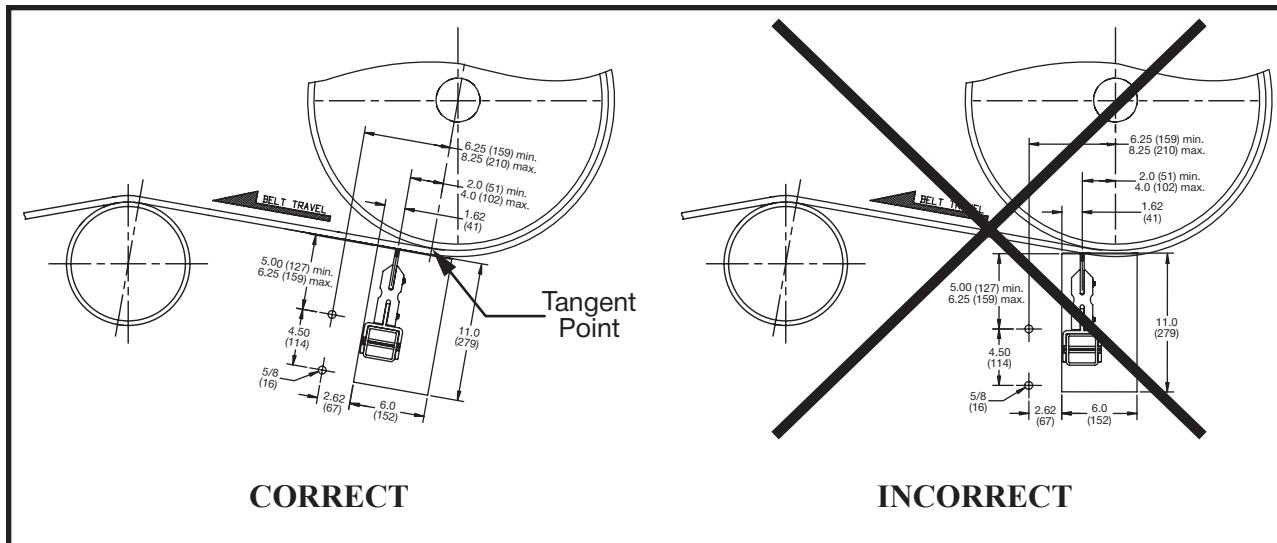

**Figure 2. Tangent Point**

## IMPORTANT

Belt cleaner mounting location must be marked using a line perpendicular to the belt line at the tangent point (point where the belt leaves the head pulley), see Figure 2. DO NOT use the vertical centerline of the head pulley.

## NOTE


Solid backing of the blade is essential to ensure proper operation and efficient cleaning. Install the cleaner adjacent to the head pulley or a flat pressure roller to obtain best cleaning results.

## NOTE

For installation on enclosed head pulley chutework, draw all dimension lines on chute wall. In applications where head pulley is not enclosed, use the best available field resources and/or methods to ensure that these critical dimensions are followed for a proper installation.

### **Marking chute cutouts**

1. Mark the chute cutout and mount hole locations as shown in Figure 1. Repeat on both sides of chute, ensuring cutouts are accurately aligned with each other.
2. At the selected mounting position, cut the cleaner access slots and drill the mount holes in each side of the chute. Dress and de-burr the holes and cutouts.

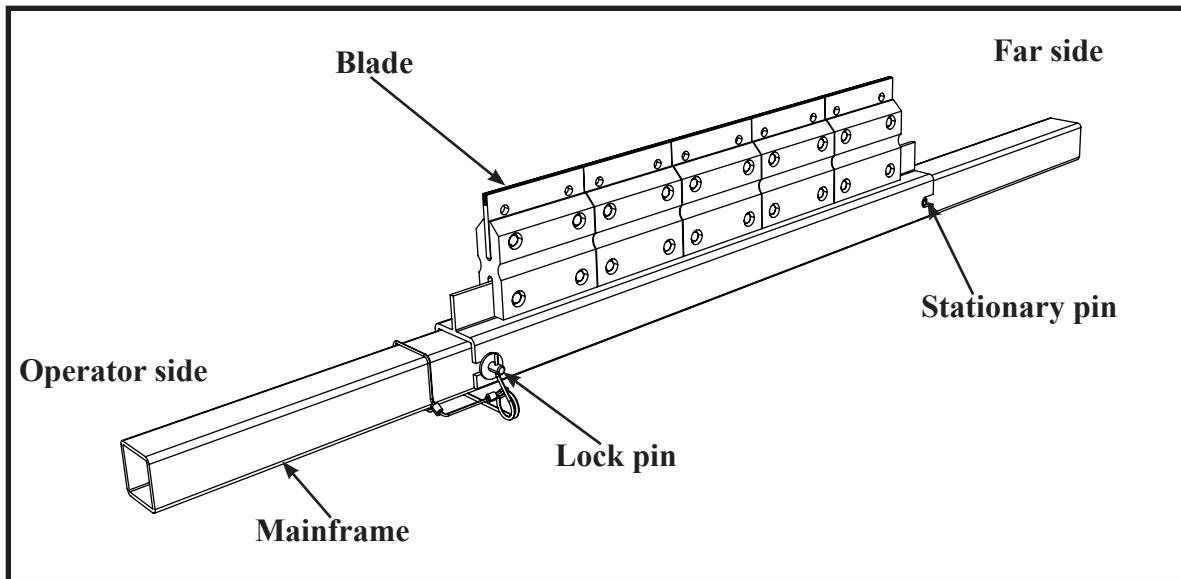

**Figure 3. Removing and Installing Blade Cartridge**

### **Removing blade**

1. Remove lock pin from operator side of mainframe and blade.
2. Pull blade away from stationary pin on far side of mainframe and remove from mainframe. Make sure lock pin remains attached to mainframe.

### **Installing tensioner**

1. Install tensioner according to *Martin® SQC2S™ Square Mainframe Tensioner Operator's Manual*, P/N M3815.
2. If using Martin® Inspection Door, install according to *Martin® Inspection Door Operator's Manual*, P/N M3891.

### **Installing blade**

1. Slide blade cartridge onto mainframe with blade positioned as shown in Figure 1. Push far side end of blade against stationary pin until it locks.
2. Insert lock pin in mainframe and cartridge.
3. Make sure blades are centered on belt and mainframe is parallel to belt.
4. Tension belt cleaner according to *Martin® SQC2S™ Square Mainframe Tensioner Operator's Manual*, P/N M3815.

## After Installing Belt Cleaner



1. Thoroughly wipe chute wall clean above tensioner.
2. Place Conveyor Products Warning Label (P/N 23395) on outside chute wall visible to belt cleaner operator.

### **⚠ WARNING**



**Failure to remove tools from installation area and conveyor belt before turning on energy source can cause serious injury to personnel and damage to belt.**

### **⚠ DANGER**



**Do not touch or go near conveyor belt or conveyor accessories when conveyor belt is running. Body or clothing can get caught and pull body into conveyor belt, causing severe injury or death.**

3. Turn on conveyor belt for 1 hour, then turn off.

### **⚠ DANGER**



**Before installing, servicing, or adjusting the belt cleaner/tensioner, turn off and lock out/tag out all energy sources to the conveyor and conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.**

4. Make sure all fasteners are tight. Tighten if necessary.
5. Make sure cleaner is not changing belt line. If it is, install belt support ahead of blade-to-belt contact point (Secondary Cleaner).
6. Inspect belt cleaner for the following:
  - Wear. (A small amount of “break-in” wear may be found. This will stop once blades wear to conveyor belt contour.)
  - Material buildup. (No material between blades and return side of conveyor belt should be found.)
7. If wear, material buildup, or some other problem exists, see “Troubleshooting.”

# Weekly Maintenance

---

## IMPORTANT

Read entire section before beginning work.

## NOTE

Maintenance inspection should be performed no less than weekly. Some applications may require more frequent maintenance inspections.



## DANGER

Before installing, servicing, or adjusting the belt cleaner/tensioner, turn off and lock out/tag out all energy sources to the conveyor and conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.

1. Remove any material from belt cleaner.
2. Make sure all fasteners are tight. Tighten if necessary.
3. Check tension on cleaner. Re-tension if necessary.
4. Wipe all labels clean. If labels are not readable, contact Martin Engineering or a representative for replacements.
5. Check blades for excessive wear. Replace if necessary.
6. Remove equipment from service if there is any indication it is not functioning properly. Call Martin Engineering or a representative for assistance. Do NOT return equipment to operation until the cause of the problem has been identified and corrected.



## WARNING

Failure to remove tools from installation area and conveyor belt before turning on energy source can cause serious injury to personnel and damage to belt.

7. Remove all tools from maintenance area.



## DANGER

Do not touch or go near conveyor belt or conveyor accessories when conveyor belt is running. Body or clothing can get caught and pull body into conveyor belt, causing severe injury or death.

8. Start conveyor belt.

# Troubleshooting

---

Symptom	Corrective Action
Insufficient cleaning and carryback.	<ul style="list-style-type: none"> <li>Tension of cleaner on belt is set too low or too high. Increase or decrease tensioner setting.</li> <li>Blades are worn. Check blades and replace if necessary.</li> </ul>
Noise or vibration.	Tension is not sufficient or is set too high. Correct tension as necessary. If this does not correct problem, blade urethane may not match application. Contact Martin Engineering or representative.
High blade wear rate.	Tension of cleaner on belt is set too high. Reduce tensioner setting.
Unusual wear or damage to blades.	Check belt splice(s) and repair as necessary.
Bent or broken mainframe or support frame due to blade slipping through.	If blades are worn to or past the wear line, replace blades. If blades are not worn, check mainframe location.
Corrosion or chemical degradation.	Blade urethane may not match application. Contact Martin Engineering or representative.

## NOTE

Conveyor equipment such as conveyor belt cleaners are subject to a wide variety of bulk materials characteristics and often have to perform under extreme operating or environmental conditions. It is not possible to predict all circumstances that may require troubleshooting. Contact Martin Engineering or a representative if you are experiencing problems other than those listed in the "Troubleshooting" chart above. Do not return the equipment to operation until the problem has been identified and corrected.

### *Installation checklist*

If after taking the corrective actions suggested under "Troubleshooting" you are still experiencing problems, check for the following:

Installation Checklist
✓ Pre-Cleaner mainframe is proper distance from belt surface on both ends of mainframe.
✓ Pre-Cleaner blade tip is at or below horizontal center line of pulley and does not lie in path of material flow.
✓ Secondary Cleaner blade tip is 2 in. (51 mm) past vertical center line of pulley.
✓ Secondary Cleaner is not changing belt line.
✓ Blades are centered on belt.

# Part Numbers

**NOMENCLATURE** **SQC2S-XX X XX XX X X X X**

P/N Prefix \_\_\_\_\_  
 Belt Width (inches) \_\_\_\_\_  
 Blade Type \_\_\_\_\_  
 Belt Cleaning Width (inches) \_\_\_\_\_  
 Blade Buffer Type \_\_\_\_\_  
 Mainframe Option \_\_\_\_\_  
 Tensioner Option \_\_\_\_\_  
 Additional Options \_\_\_\_\_

**BLADE TYPE**  
**C:** Corrosion Resistant with Tungsten Carbide Tips  
**R:** General Applications and Reversing Belts—Tungsten Carbide  
**S:** Corrosion Resistant  
**Ø:** No Blades

**BLADE CLEANING WIDTH**  
 Full belt width or Approx.  
 6 inches less belt width.

**BLADE BUFFER TYPE**  
**MR:** Molded Rubber  
**FR:** Flame-Retardant Rubber  
**ØØ:** No Buffers

**MAINFRAME OPTIONS**  
**P:** Painted  
**S:** Stainless

**TENSIONER OPTIONS**  
**T:** Tensioner  
**S:** 316 SS Tensioner  
**H:** HD Tensioner  
**G:** 316 SS HD Tensioner  
**Ø:** No Tensioner

**ADDITIONAL OPTIONS**  
**Ø:** None  
**D:** Dust-Tight Steel Cover Door  
**S:** Dust-Tight Stainless Steel Cover Door  
**U:** Magnetic Urethane Cover Door

**NOMENCLATURE** **SQC2S-XX X XX XX X X X X**

Belt Width (inches) \_\_\_\_\_  
 Blade Type \_\_\_\_\_  
 Belt Cleaning Width (inches) \_\_\_\_\_  
 Urethane Color \_\_\_\_\_  
 Mainframe Option \_\_\_\_\_  
 Tensioner Option \_\_\_\_\_  
 Additional Options \_\_\_\_\_

**BLADE TYPE**  
**C:** Tungsten Carbide with Stainless Insert  
**D:** Slit Urethane  
**R:** Reversing Belts—Urethane  
**S:** Stainless Insert  
**T:** Tungsten Carbide  
**U:** Urethane  
**Ø:** No Blades

**BLADE CLEANING WIDTH**  
 Full belt width or Approx.  
 6 inches less belt width.


**URETHANE COLOR**  
**O3:** Orange Urethane  
**B3:** Brown Urethane  
**G3:** Green Urethane  
**N3:** Navy Blue Urethane

**MAINFRAME OPTIONS**  
**P:** Painted  
**S:** Stainless

**TENSIONER OPTIONS**  
**T:** Tensioner  
**S:** 316 SS Tensioner  
**H:** HD Tensioner  
**G:** 316 SS HD Tensioner  
**Ø:** No Tensioner

**ADDITIONAL OPTIONS**  
**Ø:** None  
**D:** Dust-Tight Steel Cover Door  
**S:** Dust-Tight Stainless Steel Cover Door  
**U:** Magnetic Urethane Cover Door

# Part Numbers

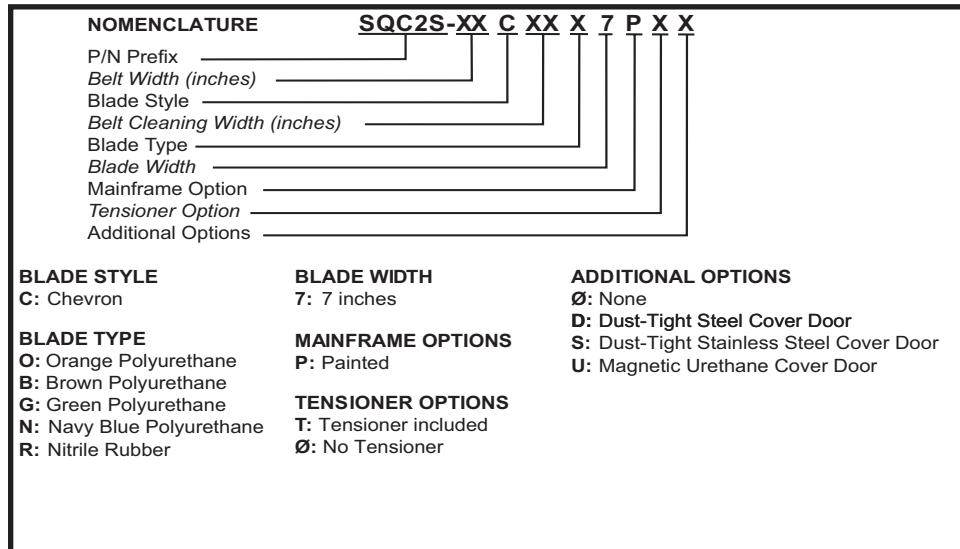

**Martin® SQC2S™ Assembly** P/N SQC2S-XXXXXXXXXXXX. See Figures 4 and 5. Includes blade cartridge, mainframe and tensioners.


**Martin® SQC2S™ Chevron Assembly** P/N SQC2S-XXCXXX7XXX. See Figure 6. Includes blade cartridge, mainframe and tensioners.

**Martin® Tensioners** Martin® SQC2S™ Square Mainframe Tensioners: P/N 38664.  
Martin® SQC2S™ Square Mainframe Tensioners: P/N 38664-SS.  
Martin® SQC2S™ Square Mainframe Tensioners HD: P/N 38664-HD.  
Martin® SQC2S™ Square Mainframe Tensioners HD: P/N 38664-HDS.

**Martin® SQC2S™ Blade Cartridges** P/N SQC2SC-XXXXXXXXXXXX. Includes replacement blades.  
P/N SQC2SC-XXXXXXX3XX. Includes replacement blades.  
P/N SQC2SC-XXCXXX7X. Includes replacement blades.

**Miscellaneous** **Martin® Heavy-Duty Hanger Mount Assembly:** P/N 34233-HD. Used to mount Martin® SQC2S™ Tensioners onto stringer instead of onto chute wall.

# Part Numbers

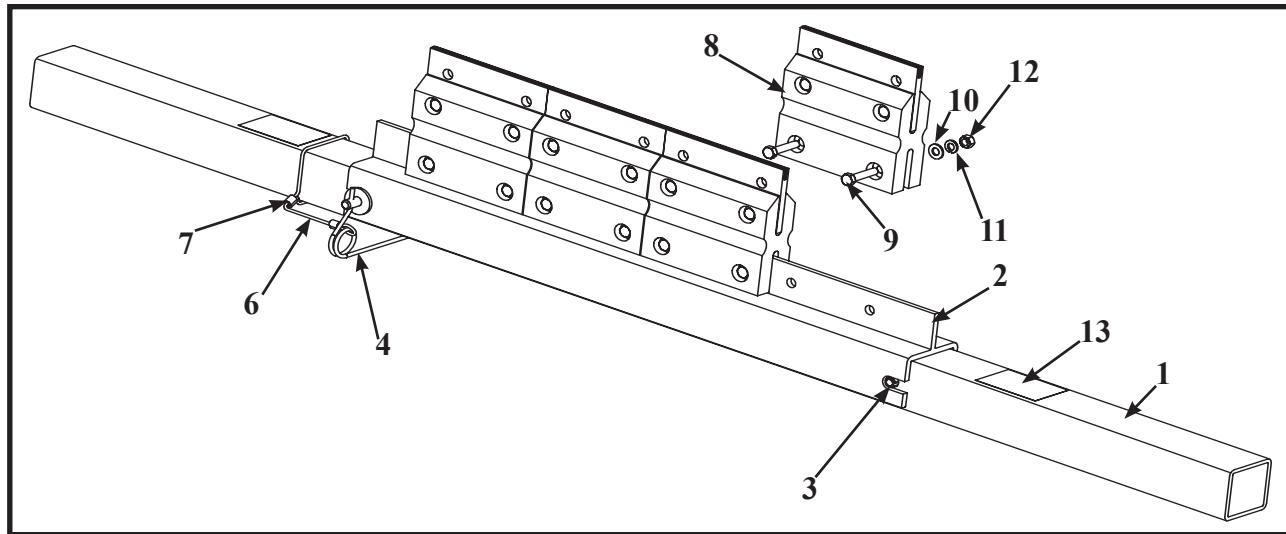

**Figure 4. Martin® SQC2S™ Cleaner Assembly, P/N SQC2S-XXXXXXXXXX**

Item	Description	Part Number	Qty
1	Mainframe	Table II	1
2	Blade Cartridge Extrusion	Table II	1
3	Pin Slotted Spring 1/2 x 3 ZP	33840	1
4	Pin Snap Lock 7/16	33841	1
5 (NS)	Urethane Shipping Pin	35846	1
6	Cable Aircraft 1/8 Dia.	100107	2 ft
7	Cable Clip for 1/8 Dia. Cable	23481	2
8	Blade Assembly	Table IV	Table III
9	Screw HHC 5/16-18NC x 1-1/2 SS	SP04436-30	Table III
10	Washer Flat 5/16 Narrow SS	37724	Table III
11	Washer Lock Helical Spring 5/16 SS	33055	Table III
12	Nut Hex 5/16-18NC Narrow SS	37723	Table III
13	Label Martin Products	38048	2
14 (NS)	Martin® SQC2S™ Tensioner	38664	1
15 (NS)	Manual Operator's	M3820	1
16 (NS)	Split Dust-Tight Door Assembly	Table VI	1

**Table II-A. Martin® SQC2S™ Cleaner Mainframe Part Numbers and Quantities**

<b>Assembly Part No.</b>	<b>P/N Item 1</b>	<b>P/N Item 2</b>	<b>Extended Mainframe Assembly Part No.</b>	<b>P/N Item 1</b>	<b>P/N Item 2</b>
SQC2S - 18X12XXXXXX	38657 - 18X	SQC2S - 35696 - 18	SQC2S - 18X12XXEXXX	38657 - 18EX	SQC2S - 35696 - 18
SQC2S - 18X18XXXXXX	38657 - 18X	SQC2S - 35696 - 18F	SQC2S - 18X18XXEXXX	38657 - 18EX	SQC2S - 35696 - 18F
SQC2S - 24X18XXXXXX	38657 - 24X	SQC2S - 35696 - 24	SQC2S - 24X18XXEXXX	38657 - 24EX	SQC2S - 35696 - 24
SQC2S - 24X24XXXXXX	38657 - 24X	SQC2S - 35696 - 24F	SQC2S - 24X24XXEXXX	38657 - 24EX	SQC2S - 35696 - 24F
SQC2S - 30X24XXXXXX	38657 - 30X	SQC2S - 35696 - 30	SQC2S - 30X24XXEXXX	38657 - 30EX	SQC2S - 35696 - 30
SQC2S - 30X30XXXXXX	38657 - 30X	SQC2S - 35696 - 30F	SQC2S - 30X30XXEXXX	38657 - 30EX	SQC2S - 35696 - 30F
SQC2S - 36X30XXXXXX	38657 - 36X	SQC2S - 35696 - 36	SQC2S - 36X30XXEXXX	38657 - 36EX	SQC2S - 35696 - 36
SQC2S - 36X35XXXXXX	38657 - 36X	SQC2S - 35696 - 36F	SQC2S - 36X35XXEXXX	38657 - 36EX	SQC2S - 35696 - 36F
SQC2S - 42X35XXXXXX	38657 - 42X	SQC2S - 35696 - 42	SQC2S - 42X35XXEXXX	38657 - 42EX	SQC2S - 35696 - 42
SQC2S - 42X41XXXXXX	38657 - 42X	SQC2S - 35696 - 42F	SQC2S - 42X41XXEXXX	38657 - 42EX	SQC2S - 35696 - 42F
SQC2S - 48X41XXXXXX	38657 - 48X	SQC2S - 35696 - 48	SQC2S - 48X41XXEXXX	38657 - 48EX	SQC2S - 35696 - 48
SQC2S - 48X47XXXXXX	38657 - 48X	SQC2S - 35696 - 48F	SQC2S - 48X47XXEXXX	38657 - 48EX	SQC2S - 35696 - 48F
SQC2S - 54X47XXXXXX	38657 - 54X	SQC2S - 35696 - 54	SQC2S - 54X47XXEXXX	38657 - 54EX	SQC2S - 35696 - 54
SQC2S - 54X53XXXXXX	38657 - 54X	SQC2S - 35696 - 54F	SQC2S - 54X53XXEXXX	38657 - 54EX	SQC2S - 35696 - 54F
SQC2S - 60X53XXXXXX	38657 - 60X	SQC2S - 35696 - 60	SQC2S - 60X53XXEXXX	38657 - 60EX	SQC2S - 35696 - 60
SQC2S - 60X59XXXXXX	38657 - 60X	SQC2S - 35696 - 60F	SQC2S - 60X59XXEXXX	38657 - 60EX	SQC2S - 35696 - 60F
SQC2S - 66X59XXXXXX	38657 - 66X	SQC2S - 35696 - 66	SQC2S - 66X59XXEXXX	38657 - 66EX	SQC2S - 35696 - 66
SQC2S - 66X65XXXXXX	38657 - 66X	SQC2S - 35696 - 66F	SQC2S - 66X65XXEXXX	38657 - 66EX	SQC2S - 35696 - 66F
SQC2S - 72X65XXXXXX	38657 - 72X	SQC2S - 35696 - 72	SQC2S - 72X65XXEXXX	38657 - 72EX	SQC2S - 35696 - 72
SQC2S - 72X71XXXXXX	38657 - 72X	SQC2S - 35696 - 72F	SQC2S - 72X71XXEXXX	38657 - 72EX	SQC2S - 35696 - 72F
SQC2S - 78X71XXXXXX	38657 - 78X	SQC2S - 35696 - 78	SQC2S - 78X71XXEXXX	38657 - 78EX	SQC2S - 35696 - 78
SQC2S - 78X77XXXXXX	38657 - 78X	SQC2S - 35696 - 78F	SQC2S - 78X77XXEXXX	38657 - 78EX	SQC2S - 35696 - 78F
SQC2S - 84X77XXXXXX	38657 - 84X	SQC2S - 35696 - 84	SQC2S - 84X77XXEXXX	38657 - 84EX	SQC2S - 35696 - 84
SQC2S - 84X83XXXXXX	38657 - 84X	SQC2S - 35696 - 84F	SQC2S - 84X83XXEXXX	38657 - 84EX	SQC2S - 35696 - 84F
SQC2S - 90X83XXXXXX	38657 - 90X	SQC2S - 35696 - 90	SQC2S - 90X83XXEXXX	38657 - 90EX	SQC2S - 35696 - 90
SQC2S - 90X89XXXXXX	38657 - 90X	SQC2S - 35696 - 90F	SQC2S - 90X89XXEXXX	38657 - 90EX	SQC2S - 35696 - 90F
SQC2S - 96X89XXXXXX	38657 - 96X	SQC2S - 35696 - 96	SQC2S - 96X89XXEXXX	38657 - 96EX	SQC2S - 35696 - 96
SQC2S - 96X95XXXXXX	38657 - 96X	SQC2S - 35696 - 96F	SQC2S - 96X95XXEXXX	38657 - 96EX	SQC2S - 35696 - 96F
SQC2S - 108X100XXXXXX	38657 - 108X	SQC2S - 35696 - 108	SQC2S - 108X100XXEXXX	38657 - 108EX	SQC2S - 35696 - 108
SQC2S - 120X112XXXXXX	38657 - 120X	SQC2S - 35696 - 120	SQC2S - 120X112XXEXXX	38657 - 120EX	SQC2S - 35696 - 120

**Table II-B. Martin® SQC2S™ Cleaner Stainless Steel Mainframe Part Numbers and Quantities**

<b>Stainless Steel Mainframe Assembly Part No.</b>	<b>P/N Item 1</b>	<b>P/N Item 2</b>	<b>Stainless Steel Extended Mainframe Assembly Part No.</b>	<b>P/N Item 1</b>	<b>P/N Item 2</b>
SQC2S - 18X12XXSXX	38657 - 18S	SQC2S - 35696 - 18S	SQC2S - 18X12XXESXX	38657 - 18ES	SQC2S - 35696 - 18S
SQC2S - 18X18XXSXX	38657 - 18S	SQC2S - 35696 - 18FS	SQC2S - 18X18XXESXX	38657 - 18ES	SQC2S - 35696 - 18FS
SQC2S - 24X18XXSXX	38657 - 24S	SQC2S - 35696 - 24S	SQC2S - 24X18XXESXX	38657 - 24ES	SQC2S - 35696 - 24S
SQC2S - 24X24XXSXX	38657 - 24S	SQC2S - 35696 - 24FS	SQC2S - 24X24XXESXX	38657 - 24ES	SQC2S - 35696 - 24FS
SQC2S - 30X24XXSXX	38657 - 30S	SQC2S - 35696 - 30S	SQC2S - 30X24XXESXX	38657 - 30ES	SQC2S - 35696 - 30S
SQC2S - 30X30XXSXX	38657 - 30S	SQC2S - 35696 - 30FS	SQC2S - 30X30XXESXX	38657 - 30ES	SQC2S - 35696 - 30FS
SQC2S - 36X30XXSXX	38657 - 36S	SQC2S - 35696 - 36S	SQC2S - 36X30XXESXX	38657 - 36ES	SQC2S - 35696 - 36S
SQC2S - 36X35XXSXX	38657 - 36S	SQC2S - 35696 - 36FS	SQC2S - 36X35XXESXX	38657 - 36ES	SQC2S - 35696 - 36FS
SQC2S - 42X35XXSXX	38657 - 42S	SQC2S - 35696 - 42S	SQC2S - 42X35XXESXX	38657 - 42ES	SQC2S - 35696 - 42S
SQC2S - 42X41XXSXX	38657 - 42S	SQC2S - 35696 - 42FS	SQC2S - 42X41XXESXX	38657 - 42ES	SQC2S - 35696 - 42FS
SQC2S - 48X41XXSXX	38657 - 48S	SQC2S - 35696 - 48S	SQC2S - 48X41XXESXX	38657 - 48ES	SQC2S - 35696 - 48S
SQC2S - 48X47XXSXX	38657 - 48S	SQC2S - 35696 - 48FS	SQC2S - 48X47XXESXX	38657 - 48ES	SQC2S - 35696 - 48FS
SQC2S - 54X47XXSXX	38657 - 54S	SQC2S - 35696 - 54S	SQC2S - 54X47XXESXX	38657 - 54ES	SQC2S - 35696 - 54S
SQC2S - 54X53XXSXX	38657 - 54S	SQC2S - 35696 - 54FS	SQC2S - 54X53XXESXX	38657 - 54ES	SQC2S - 35696 - 54FS
SQC2S - 60X53XXSXX	38657 - 60S	SQC2S - 35696 - 60S	SQC2S - 60X53XXESXX	38657 - 60ES	SQC2S - 35696 - 60S
SQC2S - 60X59XXSXX	38657 - 60S	SQC2S - 35696 - 60FS	SQC2S - 60X59XXESXX	38657 - 60ES	SQC2S - 35696 - 60FS
SQC2S - 66X59XXSXX	38657 - 66S	SQC2S - 35696 - 66S	SQC2S - 66X59XXESXX	38657 - 66ES	SQC2S - 35696 - 66S
SQC2S - 66X65XXSXX	38657 - 66S	SQC2S - 35696 - 66FS	SQC2S - 66X65XXESXX	38657 - 66ES	SQC2S - 35696 - 66FS
SQC2S - 72X65XXSXX	38657 - 72S	SQC2S - 35696 - 72S	SQC2S - 72X65XXESXX	38657 - 72ES	SQC2S - 35696 - 72S
SQC2S - 72X71XXSXX	38657 - 72S	SQC2S - 35696 - 72FS	SQC2S - 72X71XXESXX	38657 - 72ES	SQC2S - 35696 - 72FS
SQC2S - 78X71XXSXX	38657 - 78S	SQC2S - 35696 - 78S	SQC2S - 78X71XXESXX	38657 - 78ES	SQC2S - 35696 - 78S
SQC2S - 78X77XXSXX	38657 - 78S	SQC2S - 35696 - 78FS	SQC2S - 78X77XXESXX	38657 - 78ES	SQC2S - 35696 - 78FS
SQC2S - 84X77XXSXX	38657 - 84S	SQC2S - 35696 - 84S	SQC2S - 84X77XXESXX	38657 - 84ES	SQC2S - 35696 - 84S
SQC2S - 84X83XXSXX	38657 - 84S	SQC2S - 35696 - 84FS	SQC2S - 84X83XXESXX	38657 - 84ES	SQC2S - 35696 - 84FS
SQC2S - 90X83XXSXX	38657 - 90S	SQC2S - 35696 - 90S	SQC2S - 90X83XXESXX	38657 - 90ES	SQC2S - 35696 - 90S
SQC2S - 90X89XXSXX	38657 - 90S	SQC2S - 35696 - 90FS	SQC2S - 90X89XXESXX	38657 - 90ES	SQC2S - 35696 - 90FS
SQC2S - 96X89XXSXX	38657 - 96S	SQC2S - 35696 - 96S	SQC2S - 96X89XXESXX	38657 - 96ES	SQC2S - 35696 - 96S
SQC2S - 96X95XXSXX	38657 - 96S	SQC2S - 35696 - 96FS	SQC2S - 96X95XXESXX	38657 - 96ES	SQC2S - 35696 - 96FS
SQC2S - 108X100XXSXX	38657 - 108S	SQC2S - 35696 - 108S	SQC2S - 108X100XXESXX	38657 - 108ES	SQC2S - 35696 - 108S
SQC2S - 120X112XXSXX	38657 - 120S	SQC2S - 35696 - 120S	SQC2S - 120X112XXESXX	38657 - 120ES	SQC2S - 35696 - 120S

# Part Numbers

**Table III. Martin® SQC2S™ Cleaner Blade Assembly Part Numbers and Quantities**

Part No.	Qty Item 8	Qty Items 9-12
SQC2S-XXX12XXXXX	2	4
SQC2S-XXX18XXXXX	3	6
SQC2S-XXX24XXXXX	4	8
SQC2S-XXX30XXXXX	5	10
SQC2S-XXX35XXXXX	6	12
SQC2S-XXX41XXXXX	7	14
SQC2S-XXX47XXXXX	8	16
SQC2S-XXX53XXXXX	9	18
SQC2S-XXX59XXXXX	10	20
SQC2S-XXX65XXXXX	11	22
SQC2S-XXX71XXXXX	12	24
SQC2S-XXX77XXXXX	13	26
SQC2S-XXX83XXXXX	14	28
SQC2S-XXX89XXXXX	15	30

**Table IV. Martin® SQC2S™ Cleaner Assembly Blade Chart**

Part No.	P/N Item 8	Color	General Application
SQC2S-XXRXXXXXXX	SC-XXR	ORANGE	General Conditions Reversing Belt with Clips
SQC2S-XXSXXXXXXX	SC-XXS	-	Corrosion-Resistant
SQC2S-XXCXXXXXXX	SC-XXC	-	Corrosion-Resistant with Tungsten Carbide Tips

**Table V. Martin® SQC2S™ SAF2 Cleaner Assembly Part Numbers and Quantities**


<b>Part No.</b>	<b>Qty Items 8 &amp; 9 combined*</b>	<b>Qty Item 10</b>	<b>Qty Items 11-13</b>
SQC2S-XXX12X3XXX	4	2	4
SQC2S-XXX18X3XXX	6	3	6
SQC2S-XXX24X3XXX	8	4	8
SQC2S-XXX30X3XXX	10	5	10
SQC2S-XXX36X3XXX	12	6	12
SQC2S-XXX42X3XXX	14	7	14
SQC2S-XXX48X3XXX	16	8	16
SQC2S-XXX54X3XXX	18	9	18
SQC2S-XXX60X3XXX	20	10	20
SQC2S-XXX66X3XXX	22	11	22
SQC2S-XXX72X3XXX	24	12	24
SQC2S-XXX78X3XXX	26	13	26
SQC2S-XXX84X3XXX	28	14	28
SQC2S-XXX90X3XXX	30	15	30
SQC2S-XXX96X3XXX	32	16	32

\*Quantity represents total blades on the cartridge. Each cartridge has a minimum of two urethane blades, one on each end of the cartridge. The blades in between are available in either urethane or tungsten carbide.

**Table VI. Martin® SQC2S™ Cleaner Optional Door Part Numbers**

<b>Part No.</b>	<b>Description</b>	<b>P/N Item 16</b>	<b>Material</b>
SQC2S-XXXXXXXXXXD	Dust-Tight Steel Cover Door	38014-SQCS	Steel
SQC2S-XXXXXXXXXXS	Dust-Tight Stainless Steel Cover Door	38014-SQCSS	316 SS
SQC2S-XXXXXXXXXXU	Magnetic Urethane Cover Door	38014U-SQC2	Urethane

# Part Numbers

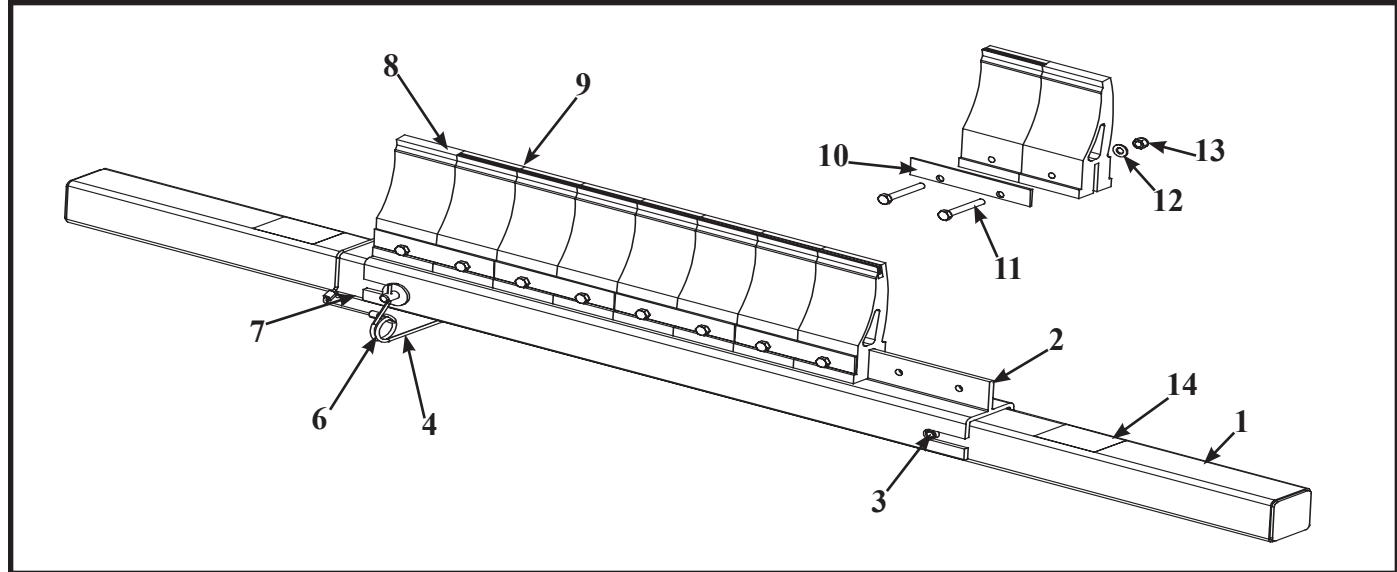

**Figure 5. Martin® SQC2S™ Cleaner Assembly  
with 3-in. Martin® SAF2™ Style Blades, P/N SQC2S-XXXXXX3XXX**

Item	Description	Part Number	Qty
1	Mainframe	38657-XXX*	1
2	Blade Cartridge Extrusion	SQC2S-35696-XX3X**	1
3	Pin Slotted Spring 1/2 X 3 ZP	33840	1
4	Pin Snap Lock 7/16	33841	1
5 (NS)	Urethane Shipping Pin	35846	1
6	Cable Aircraft 1/8 Dia.	100107	2 ft
7	Cable Clip for 1/8 Dia. Cable	23481	2
8	Urethane Blade	Table V	Table V
9	Blade with Carbide Tip	Table VII	Table V
10	Backing Plate	38280	Table V
11	Screw HHC 5/16-18NC x 2-1/4 SS	38040	Table V
12	Washer Flat 5/16 Narrow SS	37724	Table V
13	Nut Hex Elastic Lock 5/16-18NC SS	33054	Table V
14	Label Martin Products	38048	2
15 (NS)	Martin® SQC2S™ Tensioner	38664	1
16 (NS)	Manual Operator's	M3820	1
17 (NS)	Split Dust-Tight Door Assembly	Table VIII	1

\* First XX indicates belt width. Last X indicates material: mild steel (Blank) or stainless steel (S).

\*\*First XX indicates belt width (available in full belt width or belt width less 6 in.). Last X indicates cartridge length: belt width less 2 in. (Blank) or full belt width (F).


**Table VII. Martin® SQC2S™ Cleaner SAF2 Assembly Blade Chart**

<b>Part No.</b>	<b>P/N Item 8</b>	<b>P/N Item 9</b>	<b>Color</b>
SQC2S-XXCXXB3XXX	38718-UBR	38718-CBR	Brown
SQC2S-XXCXXG3XXX	38718-UGR	38718-CGR	Green
SQC2S-XXCXXN3XXX	38718-UNB	38718-CNB	Navy Blue
SQC2S-XXCXXO3XXX	38718-U	38718-C	Orange
SQC2S-XXRXXB3XXX	38718-URBR	-	Brown
SQC2S-XXRXXG3XXX	38718-URGR	-	Green
SQC2S-XXRXXN3XXX	38718-URNB	-	Navy Blue
SQC2S-XXRXXO3XXX	38718-UR	-	Orange
SQC2S-XXSXXB3XXX	38718-UBR	38718-SBR	Brown
SQC2S-XXSXXG3XXX	38718-UGR	38718-SGR	Green
SQC2S-XXSXXO3XXX	38718-U	38718-S	Orange
SQC2S-XXTXXB3XXX	38718-UBR	38718-TBR	Brown
SQC2S-XXTXXG3XXX	38718-UGR	38718-TGR	Green
SQC2S-XXTXXN3XXX	38718-UNB	38718-TNB	Navy Blue
SQC2S-XXTXXO3XXX	38718-U	38718-T	Orange
SQC2S-XXUXXB3XXX	38718-UBR	-	Brown
SQC2S-XXUXXG3XXX	38718-UGR	-	Green
SQC2S-XXUXXN3XXX	38718-UNB	-	Navy Blue
SQC2S-XXUXXO3XXX	38718-U	-	Orange

**Table VIII. Martin® SQC2S™ SAF2 Cleaner Optional Door Part Numbers**

<b>Part No.</b>	<b>Description</b>	<b>P/N Item 17</b>	<b>Material</b>
SQC2S-XXXXXX3XXD	Dust-Tight Steel Cover Door	38014-SQCS	Steel
SQC2S-XXXXXX3XXS	Dust-Tight Stainless Steel Cover Door	38014-SQCSS	316 SS
SQC2S-XXXXXX3XXU	Magnetic Urethane Cover Door	38014U-SQC2	Urethane

# Part Numbers

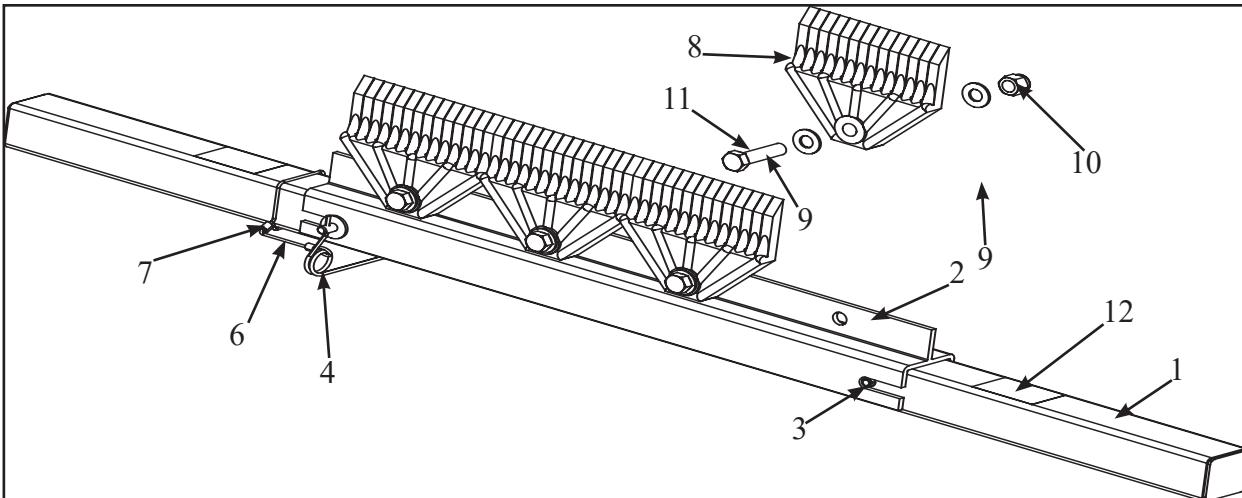

**Figure 6. Martin® SQC2S™ Cleaner Assembly with Chevron Blades, P/N SQC2S-XXCXXX7XXX**

Item	Description	Part Number	Qty
1	Mainframe	38657-XXC*	1
2	Blade Cartridge Extrusion	SQC2MS-35696-XXCH*	1
3	Pin Slotted Spring 1/2 X 3 ZP	33840	1
4	Pin Snap Lock 7/16	33841	1
5 (NS)	Urethane Shipping Pin	35846	1
6	Cable Aircraft 1/8 Dia.	100107	2 ft
7	Cable Clip for 1/8 Dia. Cable	23481	2
8	Blade Assembly	Table X	Table IX
9	Washer Flat 5/8 Narrow SS	17154	Table IX
10	Nut Hex Elastic Lock 5/8-11NC SS	24242	Table IX
11	Screw HHC 5/8-11NC X 2-1/2 SS	23351	Table IX
12	Label Martin Products	38048	2
13	Martin® SQC2S™ Tensioner	38664	1
14 (NS)	Manual Operator's	M3820	1
15 (NS)	Split Dust-Tight Door Assembly	Table XI	1
16 (NS)	Plug for 2.50 Square Tube	34896-02	2

\* XX indicates belt width (18–96 in.).

**Table IX. Martin® SQC2S™ Cleaner Assembly with Chevron Blades Part Number and Quantities**

Part No.	Qty Items 8,10,11	Qty Item 9
SQC2S-18C14X7XXX	2	4
SQC2S-24C21X7XXX	3	6
SQC2S-30C28X7XXX	4	8
SQC2S-36C35X7XXX	5	10
SQC2S-42C42X7XXX	6	12
SQC2S-48C42X7XXX	6	12
SQC2S-54C49X7XXX	7	14
SQC2S-60C56X7XXX	8	16
SQC2S-72C70X7XXX	10	20
SQC2S-84C77X7XXX	11	22
SQC2S-96C91X7XXX	13	26

**Table X. Martin® SQC2S™ Cleaner Assembly Chevron Blade Chart**

Part No.	P/N Item 8	Blade Color	Blade Material
SQC2S-XXCXXO7XXX	32262	Orange	Polyurethane
SQC2S-XXCXXB7XXX	32262-BR	Brown	Polyurethane
SQC2S-XXCXXG7XXX	32262-GR	Green	Polyurethane
SQC2S-XXCXXN7XXX	32262-NB	Navy Blue	Polyurethane
SQC2S-XXCXXR7XXX	32757	-	Nitrile Rubber

**Table XI. Martin® SQC2S™ Chevron Cleaner Optional Door Part Numbers**

Part No.	Description	P/N Item 15	Material
SQC2S-XXCXXX7XXD	Dust-Tight Steel Cover Door	38014-SQCS	Steel
SQC2S-XXCXXX7XXS	Dust-Tight Stainless Steel Cover Door	38014-SQCSS	316 SS
SQC2S-XXCXXX7XXU	Magnetic Urethane Cover Door	38014U-SQC2	Urethane

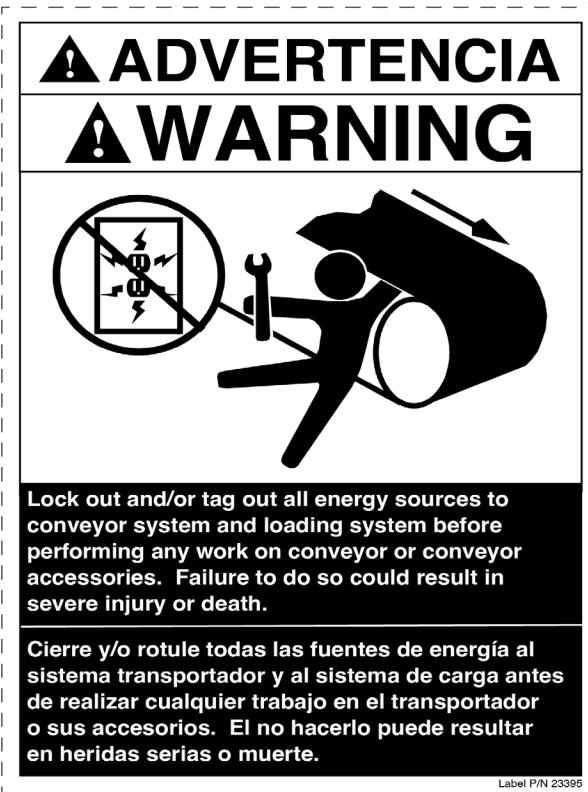


Figure 7. Conveyor Products Warning Label, P/N 23395




Figure 8. Martin® SQC2S™ Tensioning Label, P/N SQC2-10002

*Any product, process, or technology described here may be the subject of intellectual property rights reserved by Martin Engineering Company. Trademarks or service marks designated with the ® symbol are registered with the U.S. Patent and Trademark Office and may be proprietary in one or more countries or regions. Other trademarks and service marks belonging to Martin Engineering Company in the United States and/or other countries or regions may be designated with the “TM” and “SM” symbols. Brands, trademarks, and names of other parties, who may or may not be affiliated with, connected to, or endorsed by Martin Engineering Company, are identified wherever possible.*

*Additional information regarding Martin Engineering Company’s intellectual property can be obtained at [www.martin-eng.com/trademarks](http://www.martin-eng.com/trademarks).*

# **Problem Solved™**

## **GUARANTEED!**

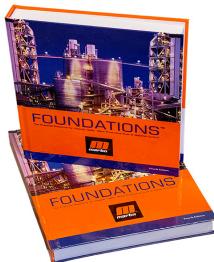

For nearly 30 years, Martin Engineering's Foundations™ Books have taught industry personnel to operate and maintain clean and safe belt conveyors. The Foundations™ Book, fourth edition, focuses on improving belt conveyors by controlling fugitive material. "The Practical Resource for Total Dust and Material Control," is a 576-page hard cover volume that provides information of value to industries where the efficient handling of bulk materials is a key to productivity and profitability.

Expanding upon the book, our Foundations™ Training Program addresses the design and development of more productive belt conveyors, and is offered in three customizable seminars. Attendees gain a better understanding of conveyor safety and performance, helping to justify upgrade investments and increase profitability.



### Martin Engineering USA

One Martin Place  
Neponset, IL 61345-9766 USA  
800 544 2947 or 309 852 2384  
Fax 800 814 1553  
[www.martin-eng.com](http://www.martin-eng.com)

COMPANY WITH  
QUALITY SYSTEM  
CERTIFIED BY DNV GL  
= ISO 9001 =