

Martin® Air Cannon Controller - single circuit Installation Instructions



Mounting enclosure

⚠ DANGER

Before installing equipment, turn off and lock out/tag out all energy sources to the hopper, conveyor, and/or conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.

⚠ WARNING

All electrical work must be done to National Electrical Code (NEC) standards.


1. Determine location for controller.

⚠ CAUTION

Do not mount controller in area subject to shock, vibration, temperatures exceeding 130°F (55°C), or explosion. Damage to controller circuitry could result.

2. Mount onto wall with fasteners.
3. Drill conduit holes in controller enclosure for solenoid and power wires. Use care not to damage internal components. Drill in most weather-proof location available on enclosure.
4. Using electrical connectors, route wires from solenoid valve to controller enclosure.

Wiring air cannon solenoids to controller

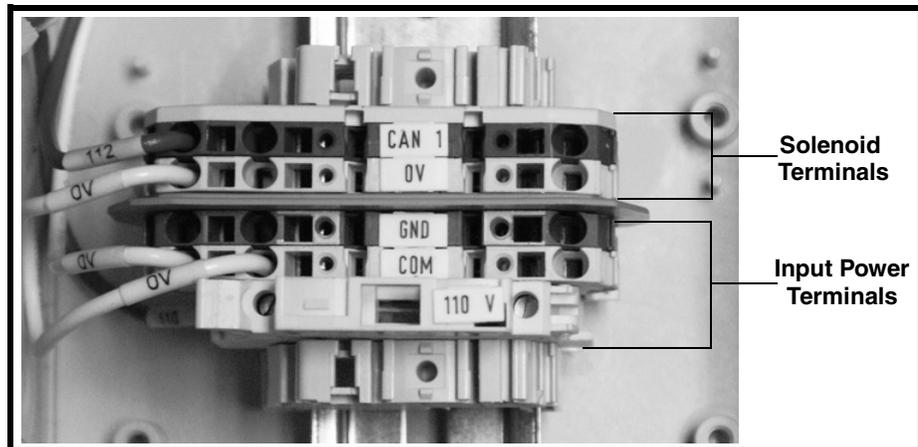


1. Connect wires from air cannon solenoid to terminal strip output 1 and N terminals (see Figure 3).
2. Route power wire (115 VAC, 60 Hz) into controller enclosure.
3. Connect power safety ground wire to terminal block labeled GND.
4. Connect power wires to terminal blocks labeled 110V and COM. Connect phase to 110V and neutral to COM.
5. Connect ground wire from solenoid to controller enclosure.

NOTE

Setting Timer

**Time range selectors and setting knobs do not turn infinitely.
Do not rotate beyond limits.**

1. Determine time for T1 (off time) and T2 (on time).
2. Using a flat screwdriver turn T1 time range selector to the desired position. Adjust T1 setting knob to the desired time. (See Table I.)
3. Using a flat screwdriver turn T2 time range selector to the desired position. Adjust T2 setting knob to the desired time.

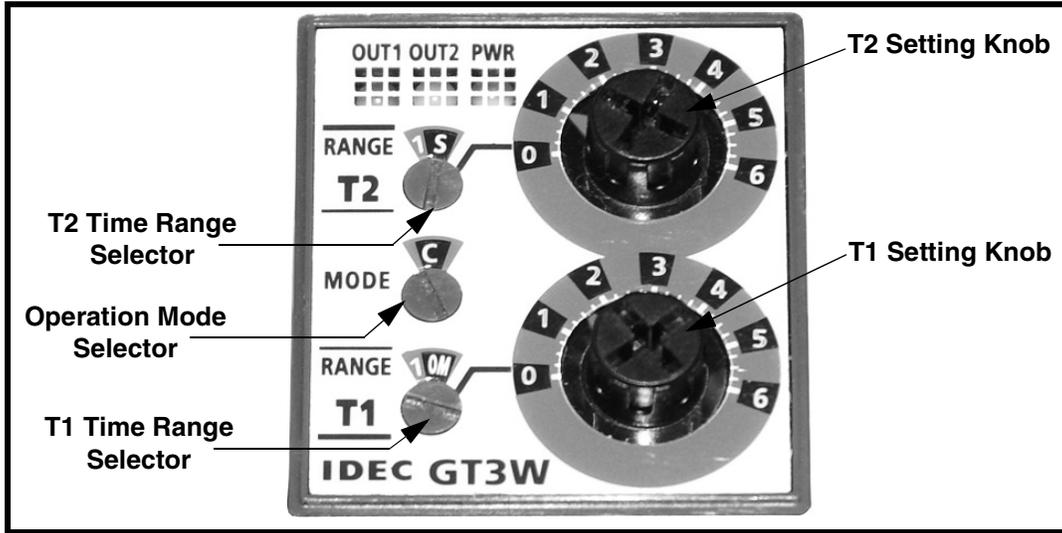

Time Range Selector	Scale	Time Range
1S	0-1	0.1 seconds to 1 second
10S		0.3 seconds to 10 seconds
10M		15 seconds to 10 minutes
1S	0-6	0.1 seconds to 6 seconds
10S		1.3 seconds to 60 seconds
1M		7.5 seconds to 1 minute
10M		75 seconds to 60 minutes
1H		7.5 minutes to 6 hours

Operation Mode "C"

Power ON	T1	T2	T1	T2	T1	T2
----------	----	----	----	----	----	----

T1-Off Time

T2-On Time

**COMPANY WITH
QUALITY SYSTEM
CERTIFIED BY DNV
= ISO 9001:2008 =**

Form No. M3860-05/12

© 2011, 2012 MARTIN ENGINEERING COMPANY. All rights reserved.

Patents and patents pending. ® Registered trademark of
Martin Engineering Company in the U.S. and other select locations.

martin®

One Martin Place

Neponset, IL 61345-9766 USA

Phone: 309-852-2384 or 800-544-2947

FAX: 800-814-1553

www.martin-eng.com