



Impact Cradles LD and MD



Operating Instructions

Version: 0
Language: ENG
M3493EUK-05/21

Table of Contents

1	General	2
1.1	About these operating instructions	2
1.2	Intended usage.....	2
1.3	Personnel qualification	3
1.4	Part number.....	4
1.5	Technical Data.....	5
2	Safety	6
2.1	General safety instructions	6
2.2	Personal protective equipment	7
2.3	Safety markings on the system.....	7
3	Installation	8
3.1	Required maximum of tools and materials.....	9
3.2	Unpacking/transportation.....	10
3.3	Determining the installation position	11
3.4	Mounting the Impact Cradles.....	12
3.5	Placing labels	13
4	Maintenance / Repair	14
4.1	Maintenance table	14
4.2	Troubleshooting.....	14
5	Disassembly / Recycling / Disposal	15
6	Scope of delivery and spare parts	16

1 General



NOTE

Before starting work these operating instructions must be read and understood completely

1.1 About these operating instructions

These operating instructions apply solely for Impact Cradles and are intended for those persons who install Impact Cradles, commission them, and monitor their usage.

The operating instructions must be kept for the lifetime of the Impact Cradles and be made available in an orderly condition to all persons entrusted with work with and on the Impact Cradles.

1.2 Intended usage

The impact cradles are used on belt conveyors and are used to support conveyor belts, mainly in the loading area and in the area of the settling zones. They are installed under the conveyor belt and support its running side.

Depending on the design, they serve to absorb the impact of falling bulk material and / or to guide the conveyor belt level.

They may only be used

- in industrial areas above ground
- according to the technical data in the documentation
- in the installation position as described in the documentation

The usage of the Impact Cradles is only considered to be as intended if the following conditions are also fulfilled:

- Before starting initial work, the personnel must have been instructed on the work on the system and on all relevant issues of occupational health and safety
- Any personal protective equipment required must be worn
- The provisions of the operating instructions must be observed in full.

Operation of the Impact Cradles under deviating conditions and unauthorised modification of the cleaners is considered as improper usage

Special product variants of the Impact Cradles can also be used in ATEX zones 22 and 21 under certain circumstances.

1.3 Personnel qualification

Only authorised and qualified personnel may be entrusted with work with and on the Impact Cradles. Persons are considered qualified if they have the qualification of a skilled worker and meet all the following requirements:

- completed professional training or at least 5 years of professional experience in the field,
- technical experience,
- knowledge of the relevant occupational health and safety regulations.

The persons must

- be able to assess the tasks and risks assigned to them,
- be able to recognise potential dangers in advance,
- be physically and cognitively able to operate the conveyors and Impact Cradles safely,
- have been trained and instructed appropriately,
- have read and understood these operating instructions.

Work on earth connections (Protective Bonding Kits), cabling, switching, control, regulation, automation and all electrical components may be carried out only by trained electricians.

1.4 Part number

Impact Cradle **LD** Assembly: **36010-XX X**

Impact Cradle **MD** Assembly: **36318-XX X**

Belt width in inch _____

Base Frame _____

S – Small acc. To CEMA

W – Wide acc. To CEMA

Product Variants "PRO"

Impact cradles are often constructively adapted to the conditions of the conveyor systems.

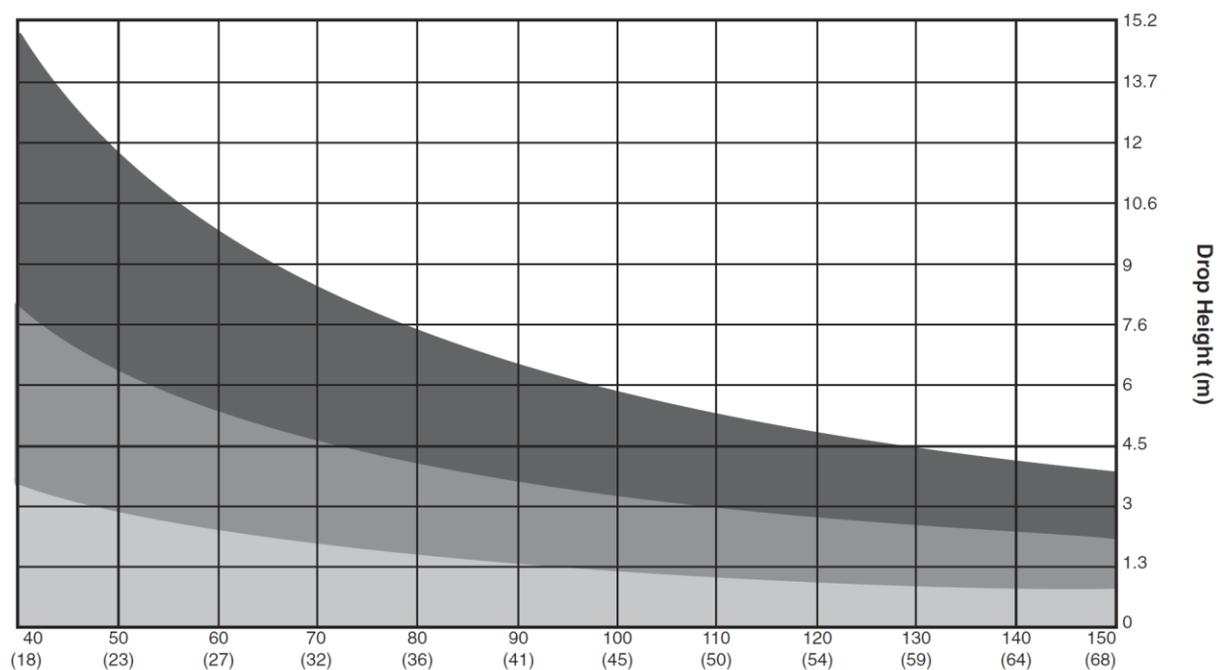
These product variants are then given different part numbers. These contain the abbreviation "PRO".

These operating instructions apply in principle also to impact cradles whose dimensions are adapted to the dimensions of the conveyor systems.

1.5 Technical Data

The Impact Cradles are suitable for the following operating parameters:

	Operating parameter
Belt widths:	500 – 2.000 mm
Belt speed:	Max. 3,3 m/s
Temperature range:	-30 – 80 °C
Impact Energy	Please refer to the table below for max. lump weights and drop heights
Reversing operation	Yes



Weight Largest Lump Lbs (kg) Determine Weight of Largest Lump. Determine Drop Height.

Heavy Duty (Cradle P/N 37357)
 Medium Duty (Cradle P/N 36318)
 Light Duty (Cradle P/N 36010)

2 Safety

2.1 General safety instructions



DANGER

Entanglement in moving or rotating parts

Body parts and/or clothing may get caught and pulled in by moving or rotating parts of the machinery.

- *Before any installation or maintenance work is carried out, ensure that all power sources to the conveyor belt system and its accessories are switched off and secured against inadvertent switching on.*
- *Apply Log-Out / Tag-Out / Try-Out (LOTOTO) Procedures*
- *Apply warning signs*



DANGER

Automatic start-up of the conveyor

Serious or fatal injuries due to unintentional start-up of the conveyor.

- *Switch off the conveyor before starting work and secure it against being switched on again.*
- *Follow safe procedures to prevent unintentional restart.*



WARNING

Flying objects

Objects left on or in the conveyor can fly around uncontrollably when the conveyor is switched on and can hit and injure persons.

- *Before switching on the conveyor, remove all foreign objects such as tools, devices, etc. from the belt!*



WARNING

Danger of injury due to unapproved component parts

Unapproved parts can directly or indirectly cause personal injury or damage to property.

- *Only use accessories and spare parts that are distributed by the manufacturer or are explicitly approved (in writing)!*

2.2 Personal protective equipment

Persons carrying out work on Impact Cradles must wear suitable personal protective equipment.

Minimum requirements:

Symbol	Meaning
	Wear head and eye protection
	Wear at least ankle-high foot protection
	Use gloves
	Use fall protection, if required

2.3 Safety markings on the system

The safety markings on the Impact Cradles must be kept in good condition and clearly visible at all times.

If parts of the system are replaced, ensure that the spare parts are or will be provided with appropriate safety markings.

3 Installation



DANGER

Entanglement in moving or rotating parts

Body parts and/or clothing may get caught and pulled in by moving or rotating parts of the machinery.

- *Before any installation or maintenance work is carried out, ensure that all power sources to the conveyor belt system and its accessories are switched off and secured against inadvertent switching on.*
- *Apply Log-Out / Tag-Out / Try-Out (LOTOTO) Procedures*
- *Apply warning signs*



DANGER

Automatic start-up of the conveyor

Serious or fatal injuries due to unintentional start-up of the conveyor.

- *Switch off the conveyor before starting work and secure it against being switched on again.*
- *Follow safe procedures to prevent unintentional restart.*



WARNING

Risk of falling down

Impact Cradles are often mounted and operated in heights. There may be a risk of falling down.

- *Therefore, use a fall protection device when installing in higher working areas!*



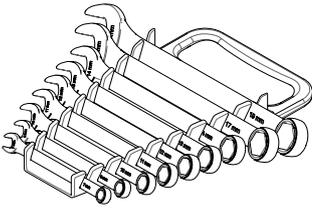
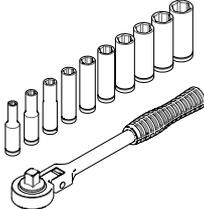
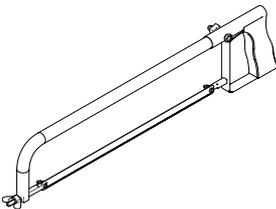
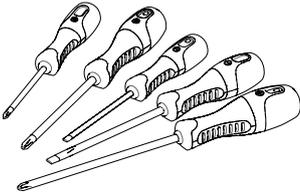
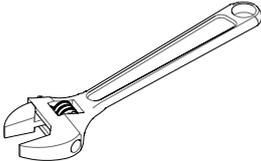
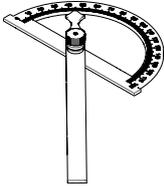
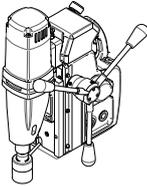
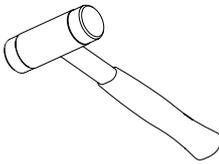
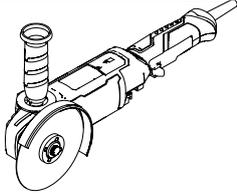
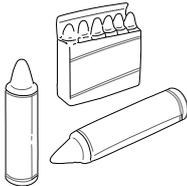
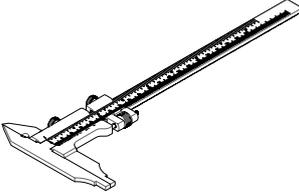
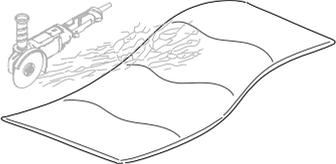
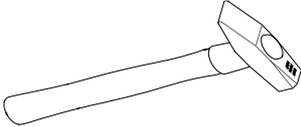
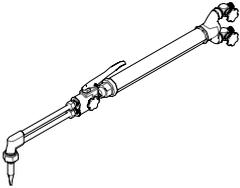
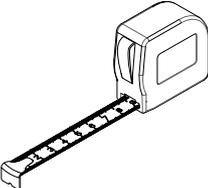
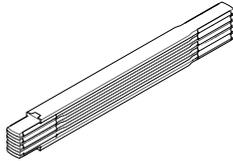
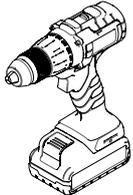
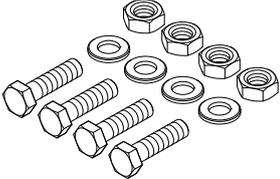
WARNING

Working in confined spaces

Areas in which Impact Cradles are installed are often difficult to access and include confined spaces. It is often necessary to work in difficult positions.

- *Determine whether occupational safety measures are necessary that go beyond the usual measures!*

3.1 Required maximum of tools and materials

3.2 Unpacking/transportation



WARNING

Heavy weight

The Impact Cradles may have weights that require handling by lifting devices. Handling Impact Cradles by hand can cause serious skeletal injuries.

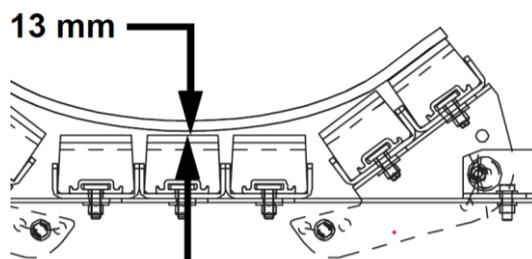
- *Use suitable aids if the load is > 25 kg per person!*

When unpacking, all components must be checked for completeness and intactness.

3.3 Requirements for installation

Make sure impact cradle surface is 1/2 in. (13 mm) below troughed belt and 1/4 in. (6 mm) below flat belt in empty condition.




This allows the belt to absorb impact while avoiding continuous friction and wear if the belt is running empty.



When installing one or more Impact Cradles, it is necessary to verify there is adequate power in the conveyor drive to compensate for the additional frictional drag.







Consult Martin Engineering for additional information.

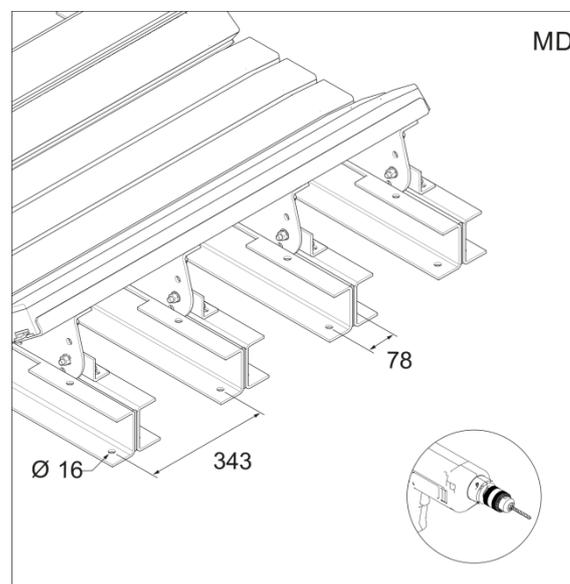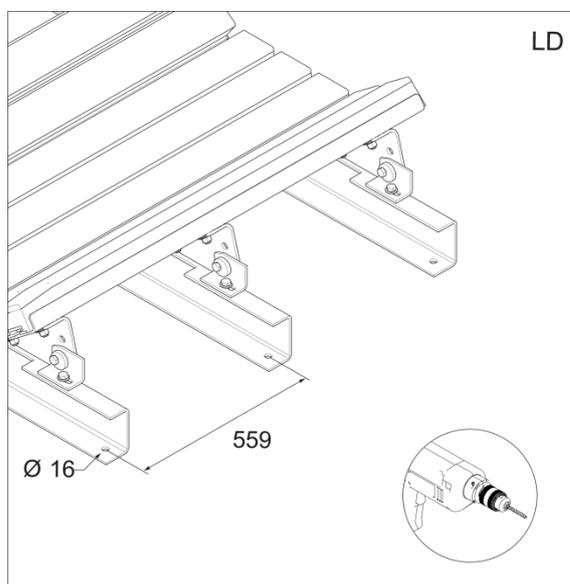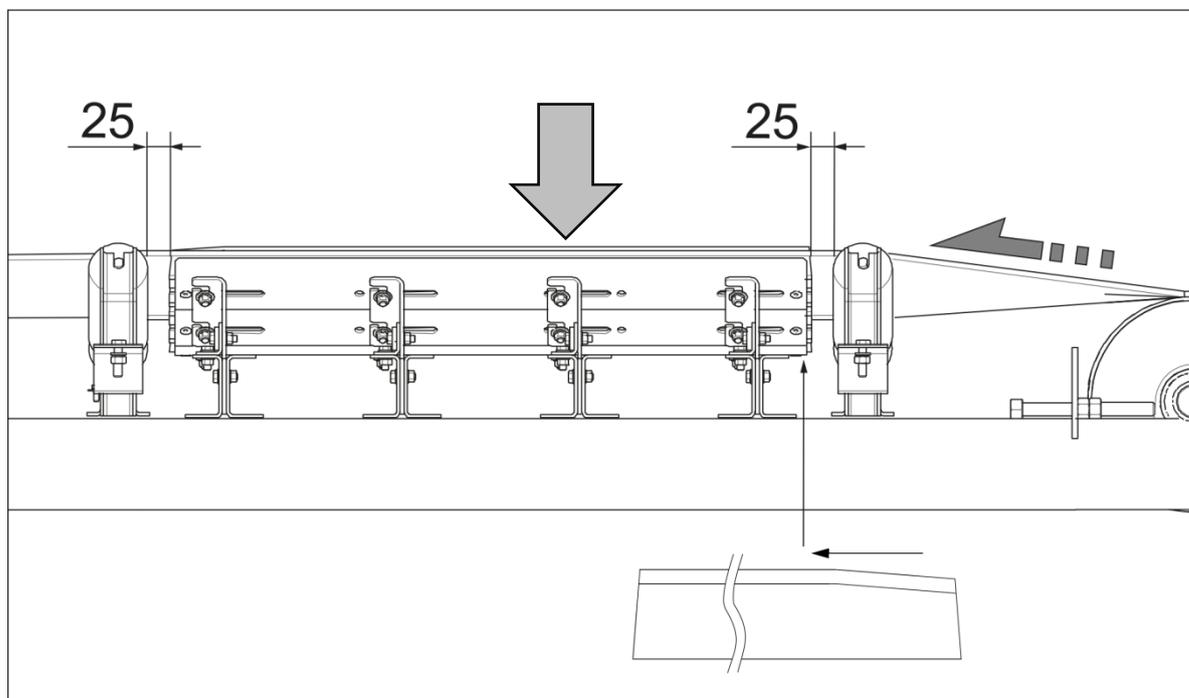3.4 Determining the installation position



Notice: If the beams protrude sideways, they should be shortened and flush with the conveyor structure.

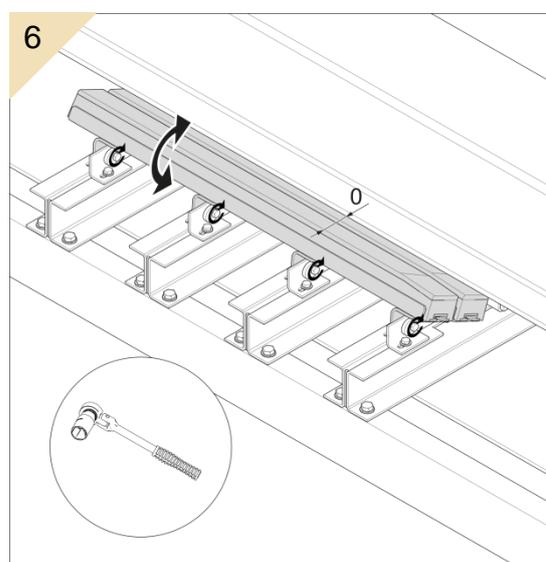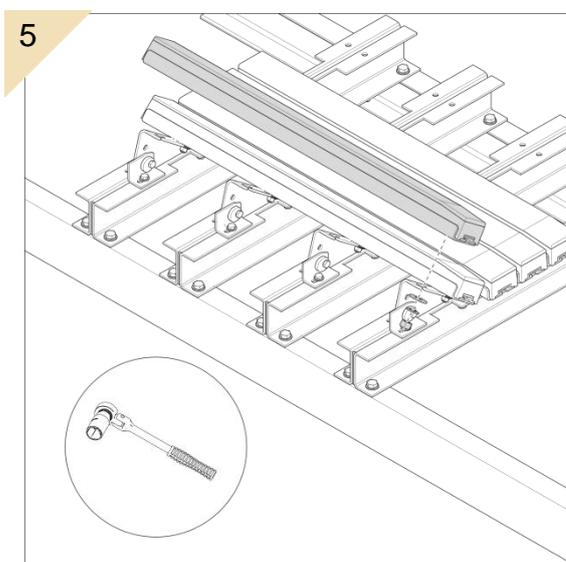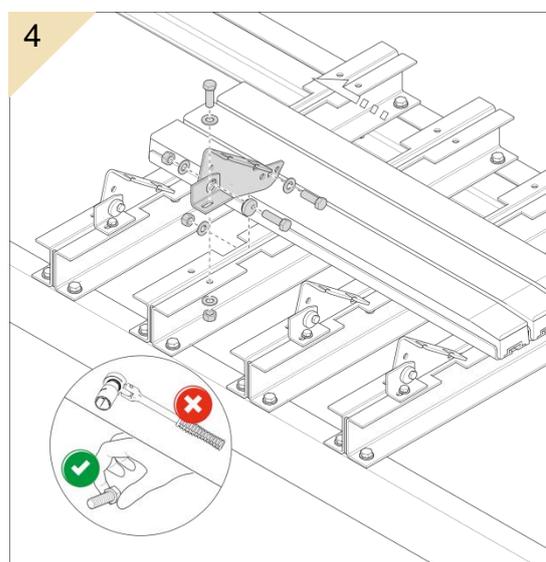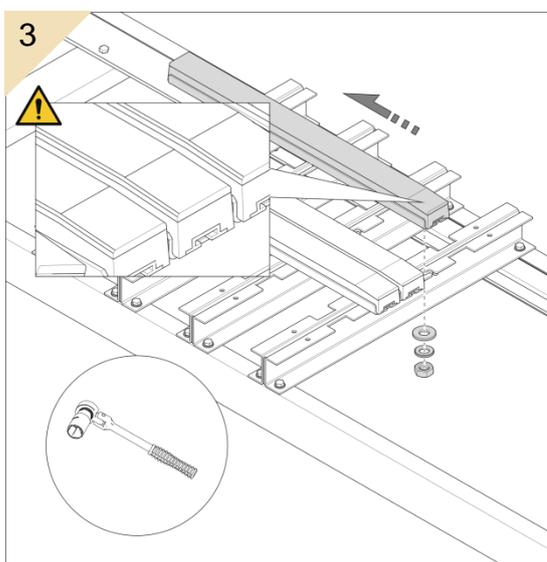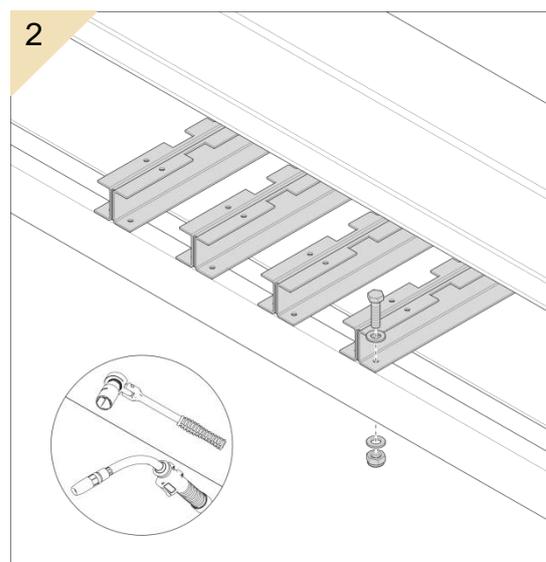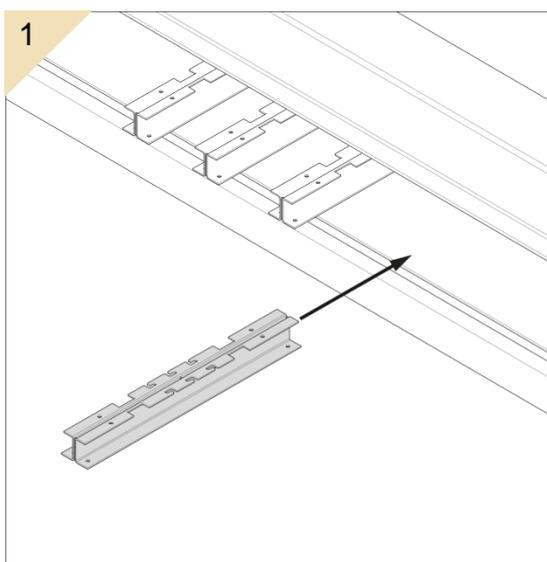3.5 Mounting the Impact Cradles



3.6 Placing labels

3.6.1 Safety label

The safety label (safety marking) below must be attached to the conveyor system in the immediate vicinity of the Impact Cradles:



3.6.2 Other labels

The labels below are attached to the product:

1. Sticker showing the address of the Martin Engineering branch and the designation of the product

4 Maintenance / Repair



WARNING

Danger of injury due to unapproved component parts

Unapproved parts can directly or indirectly cause personal injury or damage to property.

- *Only use accessories and spare parts that are distributed by the manufacturer or are explicitly approved (in writing)!*

4.1 Maintenance

Interval	Task
Weekly	Check that all securing parts are tightened. Tighten any loose connections as required.
	Clean all warning labels. Replace any warning labels which are illegible.
	Check bars for wear. If top covering on bars is worn through to core material, replace bars.

4.2 Troubleshooting

Symptom	Corrective Action
High impact bar wear rate.	Impact cradle is installed too close to belt. Make sure impact cradle surface is 1/2 in. (13 mm) below troughed belt and 1/4 in. (6 mm) below flat belt.
Impact bars worn unevenly.	Belt is unevenly loaded, wear liners are improperly installed, and/or impact bars are not parallel to belt travel. Inspect loading area and wear liners, and modify transfer point if necessary.

5 Disassembly / Recycling / Disposal

1. Disassemble Impact Cradles by material groups as far as possible.
2. Contact official bodies (disposal centres, authorities) and request information about proper disposal or recycling possibilities.
3. Recycle the different materials.

Only materials that cannot be reasonably recycled may be disposed of. Disposal must be carried out professionally.

Material groups that can be fed into a recycling process include:

- Sheet steel
- Steel profiles
- Plastics
- Rubber
- Non-ferrous metals
- Electrical cables
- Electrical components (with copper content)
- Lubricants



Germany

Martin Engineering GmbH
In der Rehbach 14, 65396 Walluf, Germany
Tel. +49 (0)6123 97820; Fax +49 (0)6123 75533
info@martin-eng.de; www.martin-eng.de

Spain

Martin Engineering Spain
c/Balmes 297 1er 2a, 08006 Barcelona, Spain
Tel. +34 (0)876 245114; Fax +34 (0)966 719371
info@martin-eng.es; www.martin-eng.es

Great Britain

Martin Engineering Ltd.
8, Experian Way, NG2 Business Park,
Nottingham NG2 1EP, Nottinghamshire, Great Britain
Tel +44 115 946 4746; Fax +44 115 946 5550
info@martin-eng.co.uk; www.martin-eng.co.uk

Turkey

Martin Engineering Türkiye
Yukarı Dudullu İmes Sanayi Sitesi, B Blok 205 Sokak No.6
34775 Ümraniye İstanbul, Turkey
Tel +90 216 499 34 91; Fax +90 216 499 34 90
info@martin-eng.com.tr; www.martin-eng.com.tr

France

Martin Engineering SARL
50 Avenue d'Alsace, 68025 Colmar Cedex, France
Tel +33 389 20 63204; Fax +33 389 20 4379
info@martin-eng.fr; www.martin-eng.fr

Italy

Martin Engineering Italy Srl
Via Buonarroti, 43/A, 20064 Gorgonzola (MI), Italy
Tel +39 295 3838 51; Fax +39 295 3838 15
info@martin-eng.it; www.martin-eng.it

Russia

OOO Martin Engineering
Ul. Bolshaya Dmitrovka, 23/1
125009 Moscow, Russia
Tel +7 495 181 33 43; Fax +7 499 720 62 12
info@martin-eng.ru; www.martin-eng.ru